

 
Data Logger FAQ

How to change network settings




Applicable to: WiNet-S

To change the network settings in the SUNGROW Winet-S, please proceed as followed.


1. Open iSolarCloud App on your mobile device and open the plant overview.

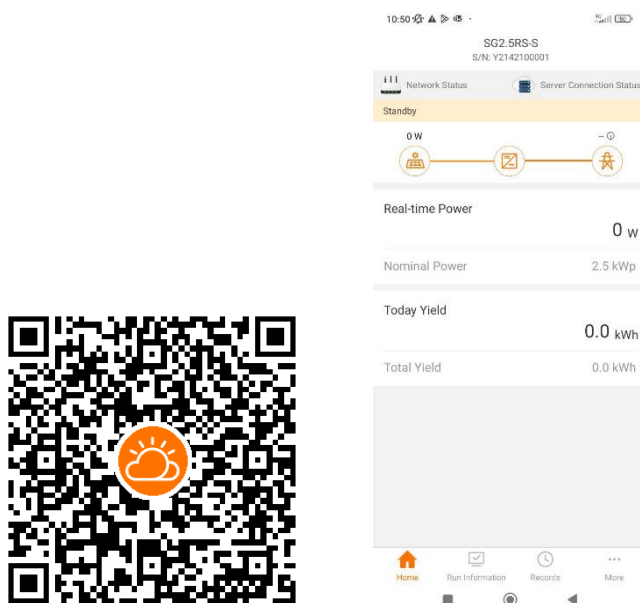

   2. Select **Local Access** in the **More**-options and connect locally to your Winet-S, by scanning the QR-Code. Don't forget to activate local network on your Winet-S by pressing the button three-times. You can now login.

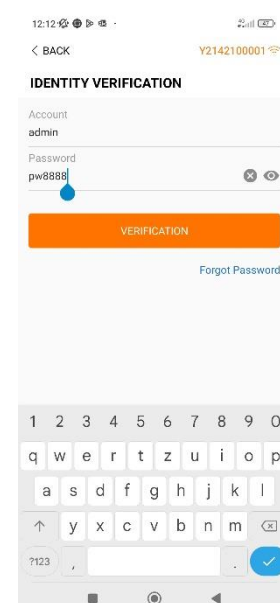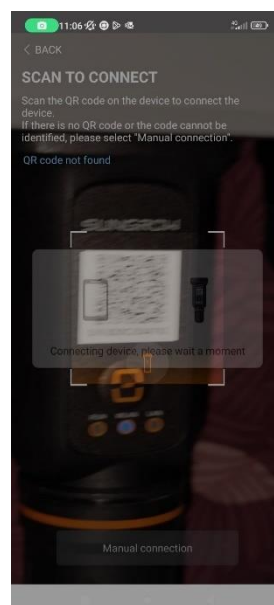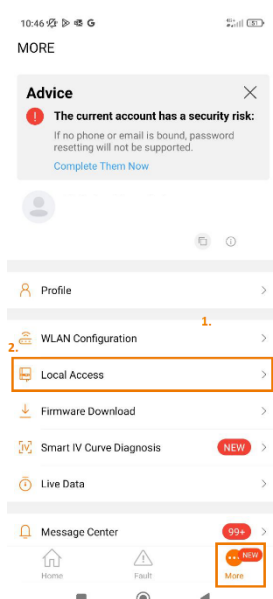

 - Go back to **More**-options and select **WLAN Configuration**. You can now choose your desired WiFi network, as it appears in the WiFi list and type in network-key. If the Winet-S connected successfully to your WiFi-network, the Network status will change to a green tick in the plant overview.

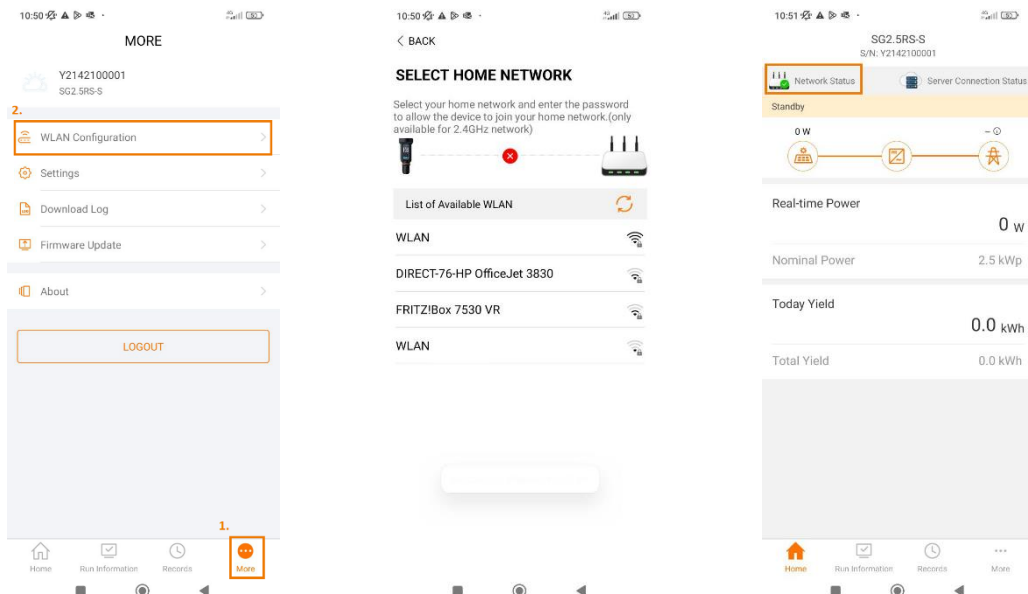

For further information, please download the user manual [here](#).

This manual is intended for professional technicians who are responsible for installation, operation, maintenance and troubleshooting of inverters, and users who need to check inverter parameters. The inverter must only be installed by professional technicians.

The professional technician is required to meet the following requirements:

- Know electronic, electrical wiring and mechanical expertise, and be familiar with electrical and mechanical schematics.
- Have received professional training related to the installation, commissioning and troubleshooting of electrical equipment.
- Be able to quickly respond to hazards or emergencies that occur during installation, commissioning and troubleshooting.
- Be familiar with local standards and relevant safety regulations of electrical systems.
- Read this manual thoroughly and understand the safety instructions related to operations.