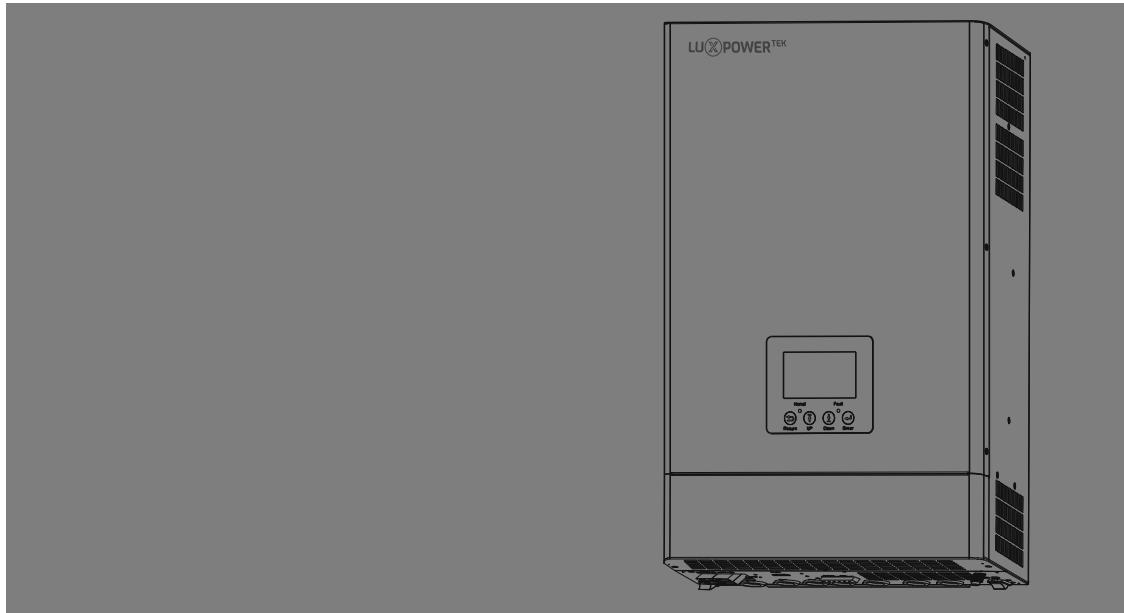




Off-grid Inverter User Manual

SNA 3000-6000 WPV



Version: UM-SNA01001

Copyright© 2024 Lux Power Technology Co., Ltd. All Rights Reserved. This manual, protected by the copyright and intellectual property rights of Lux Power Technology, may not be modified, copied, or reproduced without prior written permission. Brands and trademarks mentioned belong to their respective owners. Read carefully for product reliability and warranty eligibility. For warranty details, refer to Lux Power Technology Limited Warranty. Intended for professional service providers; no statements constitute an express or implied warranty.

Descriptions may contain predictive statements; differences may occur. Provided for reference, subject to change without notice by Lux Power Technology.



Website



YouTube



Facebook

🌐 www.luxpowertek.com



Scan to download

Table Of Contents

| | |
|--|----|
| Information on this Manual | 1 |
| Validity | 1 |
| Scope | 1 |
| Target Group | 1 |
| Safety Instructions | 1 |
| 1. Brief Introduction | 2 |
| 1.1 Features of the inverter | 2 |
| 1.2 Interface of the inverter | 3 |
| 1.3 Packing list | 4 |
| 2. Installation | 6 |
| 2.1 Preparation | 6 |
| 2.2 Mounting the Unit | 8 |
| 2.3 Battery Connection | 9 |
| 2.3.1 Battery Power Cable Connection | 9 |
| 2.3.2 Lithium Battery Connection | 9 |
| 2.4 CT | 10 |
| 2.5 AC Input/Output Connection | 12 |
| 2.6 PV Connection | 13 |
| 2.7 Working with Generator | 13 |
| 2.8 Smart load Connection | 17 |
| 2.9 AC Coupling Settings | 18 |
| 2.10 Parallel Function | 19 |
| 2.11 Power and EPS ON/OFF | 22 |
| 3. Working Modes | 22 |
| 3.1 Offgrid inverter modes introduction | 22 |
| 3.2 Working Modes related setting description | 24 |
| 3.3 Working as a hybrid inverter Related setting | 25 |
| 4. LCD Display and settings | 26 |

| | |
|---|----|
| 4.1 LED Display | 26 |
| 4.2 LCD Display | 26 |
| 4.3 Inverter Status Display | 28 |
| 4.4 LCD Settings | 29 |
| 5. Monitor System for ECO Hybrid inverter | 43 |
| 6. Specifications | 44 |
| 7. Trouble Shooting & Error List | 48 |

Revision History

| Version | Date | Description |
|----------------|------------|--|
| UM-SNA01001 | 2024.07.19 | First official release. |
| UM-SNA01001-01 | 2024.09.13 | Added descriptions and settings for GEN interface, including Smart Load and AC Coupling functionality. |

Information on this Manual

Validity

This manual is valid for the following devices: SNA3000 WPV/SNA4000 WPV/SNA5000 WPV/SNA6000 WPV

Scope

This manual provides the installation, operation and troubleshooting of this unit, please read this manual carefully before installations and operations.

Target Group

For qualified persons and end users. Qualified persons and end users must have the following skills:

- Knowledge about this unit's operation
- Training on security issues associated with installations and electrical safety
- Training in the installation and commissioning of electrical devices and installations.
- Knowledge of the applicable local standards and directives.

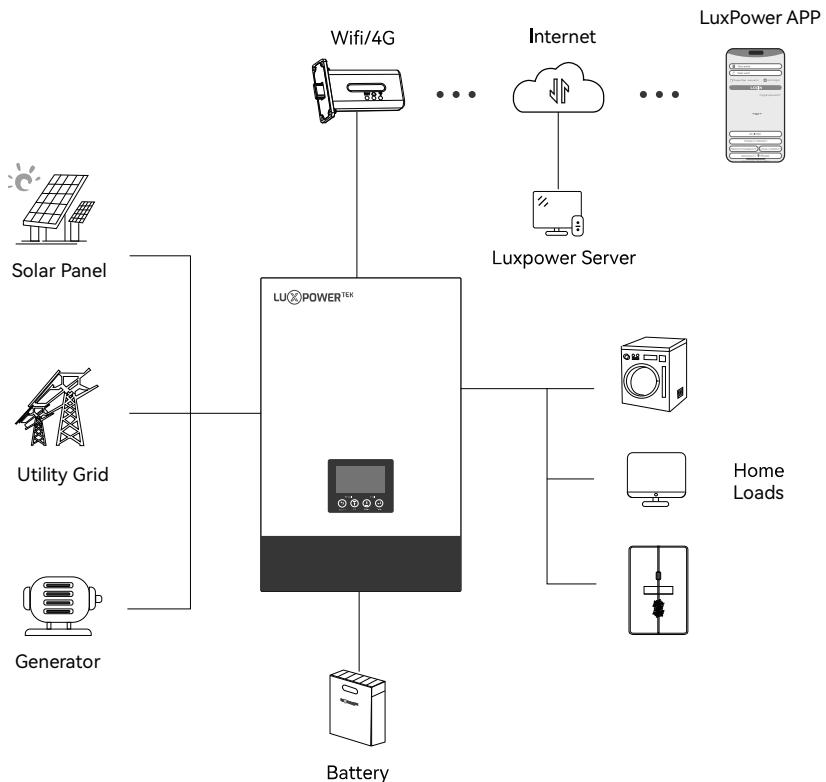
Safety Instructions

WARNING: This chapter contains important safety and operating instructions. Read and keep this manual for future reference.

- All operations and connections need to be carried out by qualified persons.
- Before using the unit, read all instructions and cautionary markings on the unit. Any damage caused by inappropriate operation is not warranted by LuxpowerTek.
- All the electrical installations must comply with the local electrical safety standards.
- Do not disassemble the unit. Take it to a qualified service center when service or repair is required, incorrect re-assembly may result in a risk of electric shock or fire. Do not open inverter cover or change any components without Luxpower's authorization, otherwise the warranty commitment for the inverter will be invalid.
- To reduce risk of electric shock, disconnect all wirings before attempting any maintenance or cleaning. Turning off the unit will not reduce this risk.
- CAUTION-To reduce risk of injury, charge only deep-cycle lead-acid type rechargeable batteries and lithium batteries, other types of batteries may burst, causing personal injury and damage.
- NEVER charge a frozen battery.
- For optimum operation of this unit, please follow the required specifications in selecting the appropriate cable size and circuit breaker
- Please strictly follow installation procedure when you want to disconnect AC or DC terminals. Refer to the installation section of this manual for details.
- GROUNDING INSTRUCTIONS -This unit should be connected to a permanent grounded wiring system. Be sure to comply with local requirements and regulations when installing this inverter.
- Never short circuit the AC and DC outputs. Do not connect to the mains when the DC input is short circuited.

1. Brief Introduction



1.1 Features of the inverter



This is a multifunctional, high frequency pure sine wave hybrid solar inverter.

- Applicable for pure off grid inverter/backup power/self-consumption/ongrid situation.
- Integrated with 2 MPPT solar charge controllers, MPPT ranges 120V~385V.
- Rated power factor 1
- Able to run with or without battery connection
- With separated generator input interface, able to control generator remotely.
- Solar and utility grid can power loads at the same time.
- With integrated advanced parallel function. Up to 18 inverters connected in parallel.
- Support CAN/RS485 for Li-ion battery BMS communication.
- WiFi/GPRS remote monitoring, setting and firmware update, support website, free IOS/Android APP.

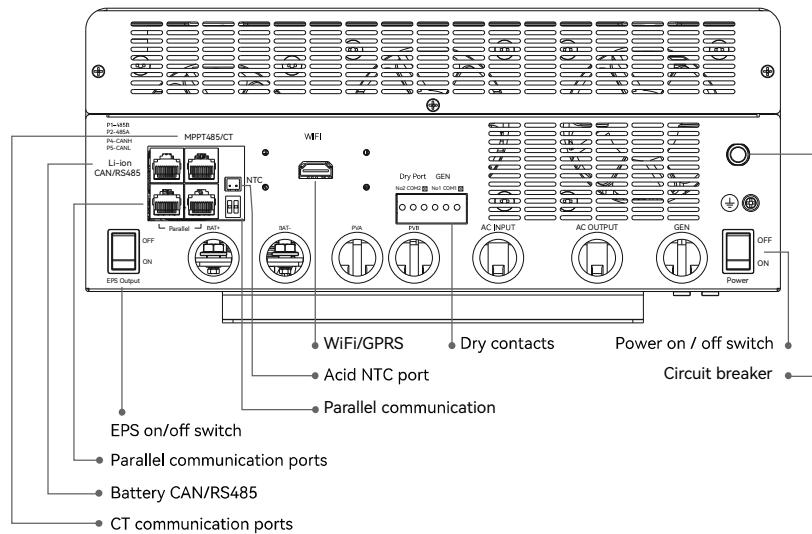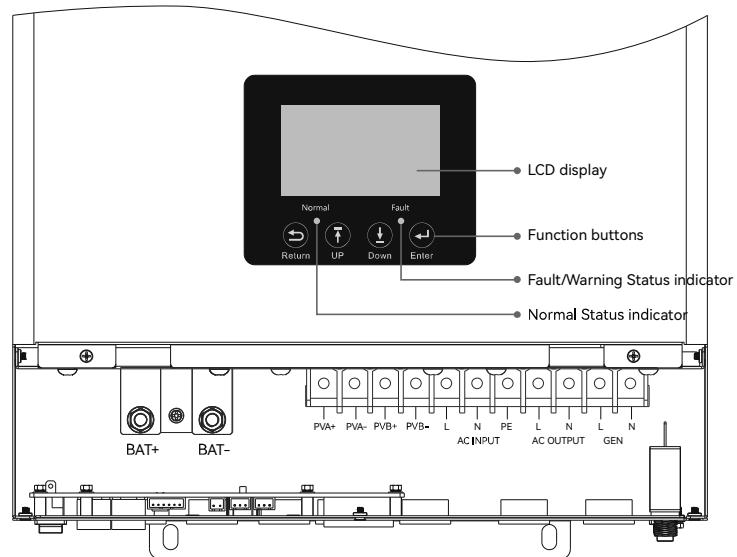
1.2 Interface of the inverter



1.3 Packing List


Before installation, please inspect the unit. Be sure that nothing inside the package is damaged.

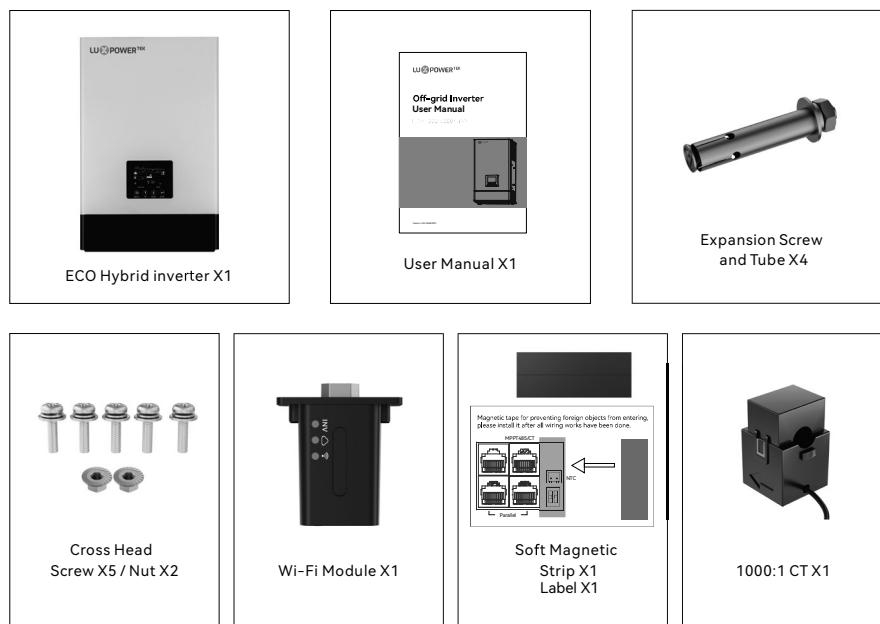
You should have received the following items in the package:



Storing the Inverter

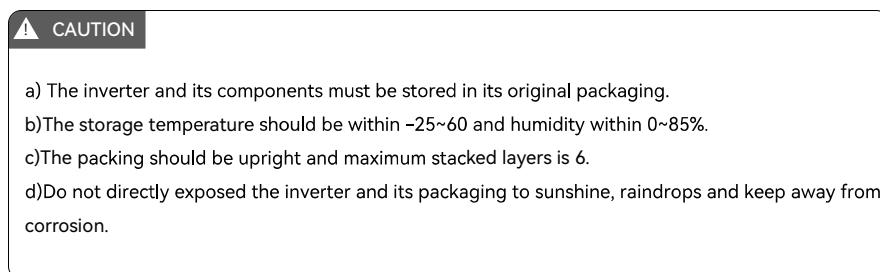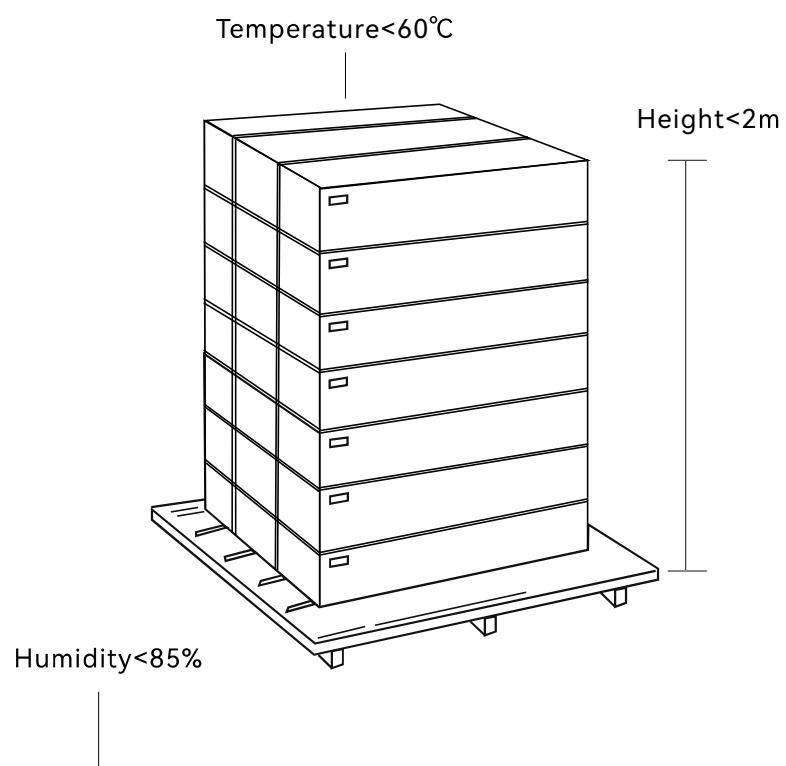The inverter must be stored appropriately if not installed immediately, refer to below figure.






2. Installation

2.1 Preparation

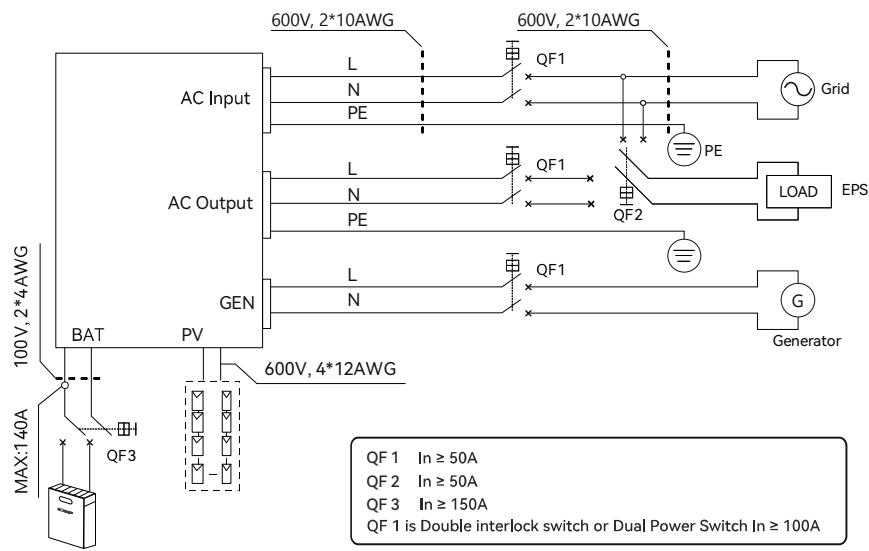The system connection is as below:



Please prepare the breakers and cables in advanced before installation.

1. Battery connection: For safe operation and regulatory compliance, please install a separate DC over-current protector or disconnect device between battery and inverter. The recommend battery capacity is 150AH~200AH, the recommended spec of DC breaker is SNA5000WPV 150A/80V, SNA6000WPV 200A/80V. Recommended battery cable and terminal size:

| Model | Maximum Amperage | Battery capacity | Wire Size | Ring Terminal | | | Torque value |
|------------|------------------|------------------|-----------|-----------------------|-------------------|--------|--------------|
| | | | | Cable mm ² | Dimensions D (mm) | L (mm) | |
| SNA5000WPV | 110A | $\geq 200A$ | 1/2AWG | 33 | 6.4 | 39.2 | 4~5 N·m |
| SNA6000WPV | 140A | | 1/1AWG | 42 | 6.4 | 39.2 | |


2. AC connection: Please install a separate AC breaker between inverter and AC input power source, inverter and AC output load. This will ensure the inverter can be securely disconnected during maintenance and fully protected from over current of AC input. The recommended spec of AC breaker is 50A. Recommended AC input/AC output/GEN cable size for each inverter.

| Model | Gauge | Cable (mm ²) | Torque Value |
|--------------------|-------|--------------------------|--------------|
| SNA5000WPV/6000WPV | 10AWG | 6 | 2.0 N·m |

3. PV Connection: Please install separately a DC circuit breaker between inverter and PV modules. The recommended of DC breaker is 600V/25A. It's very important for system safety and efficient operation to use the appropriate cable for PV module connection. To reduce risk of injury, please use the proper recommended cable size as below:

| Model | Gauge | Cable (mm ²) | Torque Value |
|--------------------|---------|--------------------------|--------------|
| SNA5000WPV/6000WPV | 1x10AWG | 6 | 2.0 N·m |

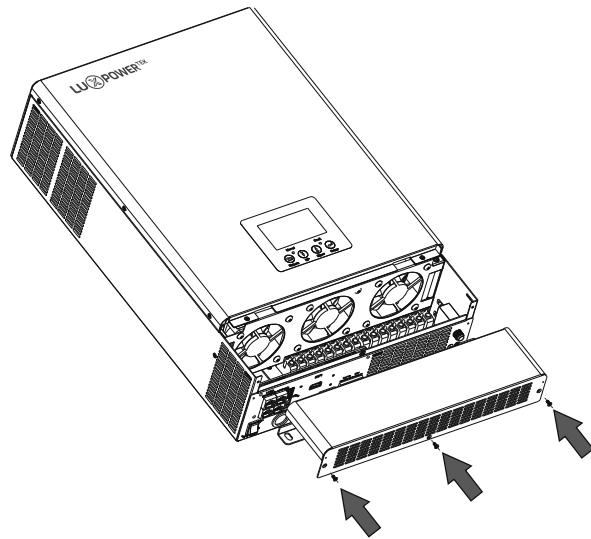4. Before connecting all wiring, please take off bottom cover by removing 3 screws as shown below.



2.2 Mounting the Unit

● NOTICE

Consider the following points before selecting where to install:

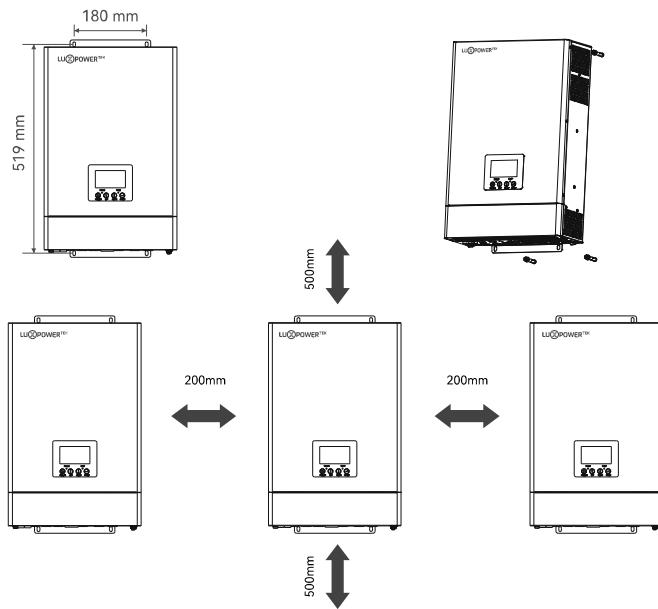
- Mount on a solid surface.
- Do not mount the inverter on flammable construction materials.
- For proper air circulation to dissipate heat, allow a clearance of approx. 20cm to the side and approx. 50cm above and below the unit.
- The ambient temperature should be between 0°C and 55°C to ensure optimal operation.
- The recommended installation position is to be adhered to the wall vertically.

Steps to mounting the unit

Step 1. Use the wall-mounting bracket as the template to mark the position of the 4 holes, then drill 8 mm holes and make sure the depth of the holes is deeper than 50mm.

Step 2. Install the expansion tubes into the holes and tighten them, then use the expansion screws (packaged together with the expansion tubes) to install and fix the wall-mounting bracket on the wall.

Step 3. Install the inverter on the wall-mounting bracket and lock the inverter using the security screws.



2.3 Battery Connection

2.3.1 Battery Power Cable Connection

Note: For lead acid battery, the recommended charge current is 0.2C (C to battery capacity).

1. Please follow below steps to implement battery connection:

2. Assemble battery ring terminal based on recommended battery cable and terminal size.

3. Connect all battery packs as units requires. It's suggested to connect at least 200Ah capacity battery for SNA5000WPV/6000WPV.

4. Insert the ring terminal of battery cable flatly into battery connector of inverter and make sure the bolts are tightened with torque of 4~5N·m. Make sure polarity of the battery is correctly connected and ring terminals are tightly screwed to the battery terminals.

2.3.2 Lithium Battery Connection

If choosing lithium battery for SNA series, please make sure the battery BMS is compatible with Luxpower inverter. Please check the compatible list in the Luxpower website.

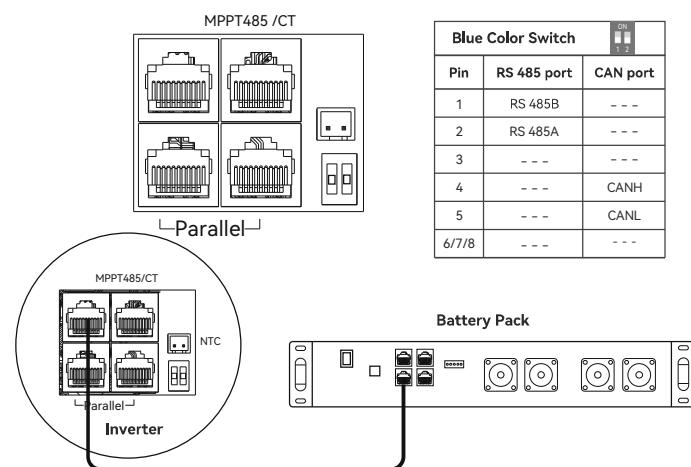
Please follow below steps to implement lithium battery connection:

1. Connect power cable between inverter and battery

2. Connect the CAN or RS485 communication cable between inverter and battery. If you do not get the communication cable from inverter manufacturer or battery manufacturer, please make the cable according to the PIN definition

3. Lithium battery configuration, in order to communicate with battery BMS, you should set the battery type to "Li-ion" in Program "03" by LCD and choose the right battery brand (for details, please check the LCD setting chapter), users can also choose the battery type and brand by monitor system.

If using a Luxpower battery, select lithium type for option 6: Luxpower; for Hina battery, select lithium type option 1: Hina Battery.



2.4 CT

To measure the power imported from and exported to the grid, the CT must be installed at the service entry point in or near the main service panel. "External Grid CT" function is off by default, and if you need inverter to export power to compensate the grid loads, you can set "External Grid CT" function to "Enable" state. Please refer to section 4.4 LCD Settings for detailed setting info.


CT Port Pin definition

The CT interface for CT connection is a RJ45 port.


| Pin | Description |
|-----|-------------|
| | CT |
| 1/3 | B |
| 2/4 | A |
| 5 | CT1N |
| 6 | CT1P |
| 7 | B2 |
| 8 | A2 |



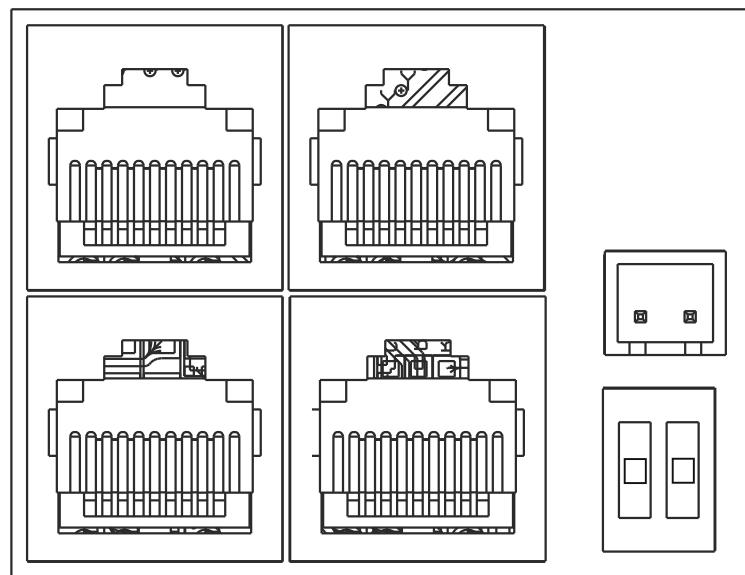MPPT485/CT




Please refer to the connection diagram for the correct positions of Grid CT and clamp the CT on the wires at the service entry point in the main service panel. The arrow on the CT is pointing to the inverter. (** Incorrectly install CT will cause The Display to show incorrect information and features of the inverter will not function correctly) If the CT is in a wrong direction, there is an option you can change the direction of the CT on your inverter call: CT Direction Reversed in Advanced Tab. You would not need to go change it physically.

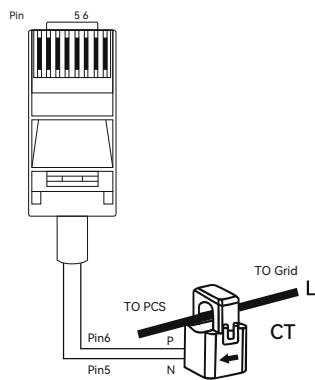

CT Clamp Ratio

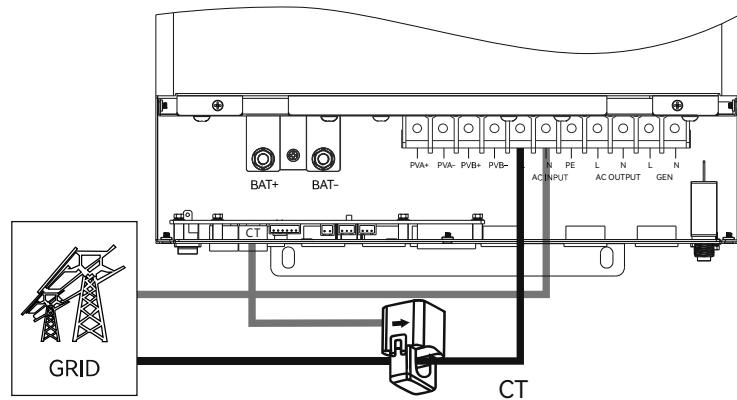The inverter support 3 ratios of CT clamp-1000:1, 2000:1 and 3000:1. The CT ratio in the accessory bag is 1000:1. If you are using a 3rd party CT, please ensure the CT ratio is one of them, and select the correct CT ratio setting in the inverter monitor page or on the inverter LCD.




2.5 AC Input/Output Connection

⚠ CAUTION

- There are two terminal blocks with "IN" and "OUT" markings. Please do NOT mis-connect input and output connectors.
- Be sure to connect AC wires with correct polarity. If the L and N wires are connected in reverse, it may cause a short circuit when the inverters are connected in parallel.

Please follow the steps below to implement the AC input/output connection:

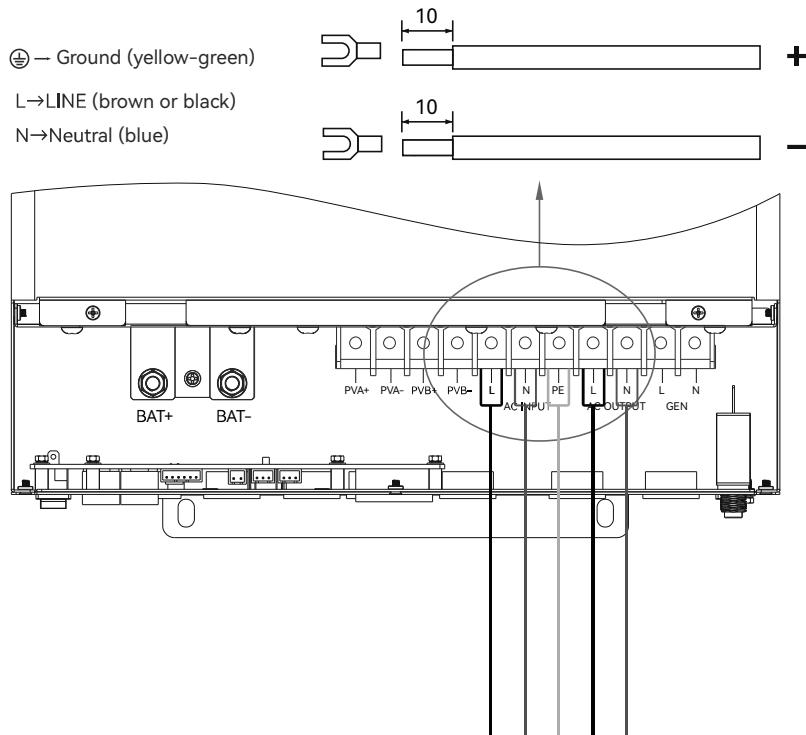
1. Before making the connection, ensure you open the DC protection device or disconnect it FIRST.
2. Remove 10mm of the insulation sleeve for the six conductors and shorten the L and N conductors by 3mm.
3. Insert AC input wires according to polarities indicated on terminal block and tighten the terminal screws. Be sure to connect PE protective conductor first.
4. Insert AC output wires according to polarities indicated on terminal block and tighten terminal screws. Be sure to connect PE protective conductor first.
5. Make sure the wires are securely connected.



2.6 PV Connection

Please follow below steps to implement PV module connection:

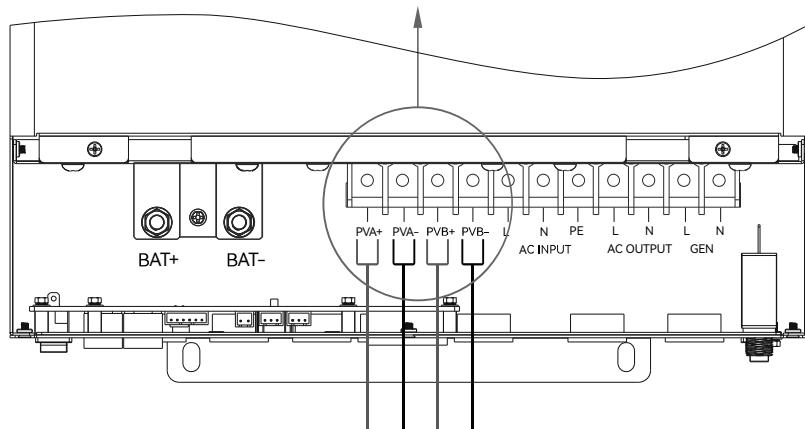1. Remove 10mm of the insulation sleeve from the positive and negative conductors.
2. Check correct polarity of connection cable from PV modules and PV input connectors.
3. Connect positive pole (+) of connection cable to positive pole (+) of PV input connector. Connect negative pole (-) of connection cable to negative pole (-) of PV input connector.
4. Make sure the wires are securely connected.



2.7 Working with Generator

L→LINE (brown or black) N→Neutral (blue)

1. Before making Generator connection, be sure to open DC protector or disconnected first.
2. Remove insulation sleeve 10mm for 2 conductors.
3. Insert L and N wires according to polarities indicated on terminal block and tighten the terminal screws.
4. Make sure the wires are securely connected.
5. Finally, after connecting all wiring, please put bottom cover back by screwing two screws as shown below.

All lux units can work with generator:


- Users can connect the generator output to ECO hybrid inverters. GEN input terminal.
- The generator will be automatically started when battery voltage is lower than the cut-off value or there is charge request from BMS. When voltage is higher than AC charge setting value, it will stop the generator.
- Battery will get charged when the generator is turned on, and the generator is bypassed to AC output to take all loads.
- The system will use AC first if there is both utility input and generator input.

2.7.1 Generator system connection

The SNA series can use a generator for backup power during grid failures. When selecting a generator, ensure it provides sufficient power and maintains a frequency with a Total Harmonic Distortion (THD) of less than 3%. As a general guideline, the generator should be at least 1.5 times the inverter's output to accommodate both load powering and battery charging. The table below lists the recommended generator capacities for optimal performance.

| Number of inverters in parallel | Generator Capacity |
|---------------------------------|--------------------|
| 1 | >10KW |
| 2 | >15KW |
| 3 | >20KW |
| 4 | 25KW |

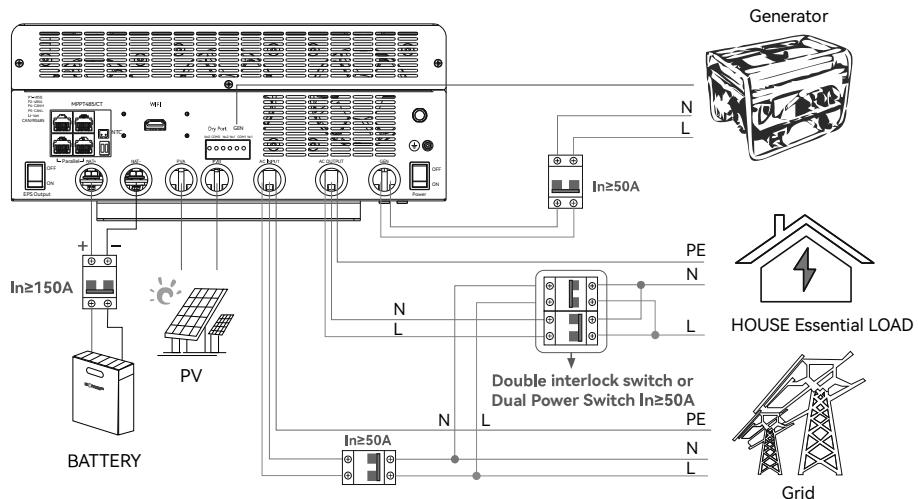This SNA5K/6K product can work with a generator and includes a dedicated Gen port for generator connection.



When properly wired and configured, the generator, if compatible with remote start, will start automatically when the battery voltage / SOC is lower than the cut-off value or there is a charge request from the BMS. When the generator is running, it will charge the batteries and excess AC power will be diverted to the AC output (LOAD) to power loads.

2.7.2 Integrated two-wire Start/Stop

The Dry port (NO2, COM2) could be used to deliver signal to external device when battery voltage reaches warning level. The GEN port (NO1, COM1) could be used to wake-up the Generator and then the generator can charge the battery.

Reminder:

Notice: NO---Normal open

Dry Port Relay Maximum Specification: 250VAC 5A

Gen Port Relay Maximum Specification: 250VAC 5A

| Unit Status | Condition | Dry port NO2 & COM2 | GEN NO1 & COM1 |
|-------------|--|------------------------|-------------------|
| | | NO2 & COM2 | NO1 & COM1 |
| Power Off | Inverter is off and no output is powered. | Open | Open |
| Power On | Battery voltage < Low DC warning voltage | Close | Close |
| | Battery voltage > Setting value or battery charging reaches floating stage | Open | Open |
| | Battery voltage < Low DC warning voltage | Close | Open |
| | Battery voltage > Setting value or battery charging reaches floating stage | Open | Open |

2.7.3 Generator AC connection

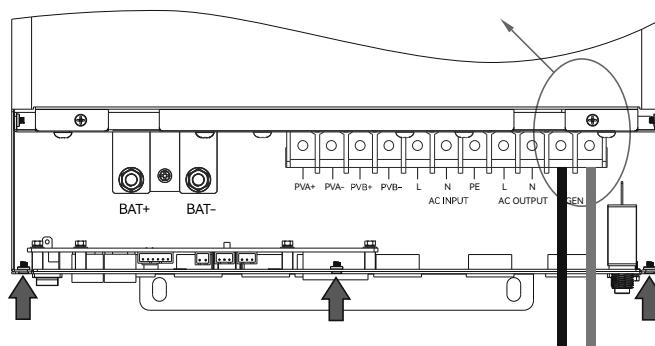
Please follow the steps listed below to ensure the generator connections are properly installed.

Step 1. Before making any wiring connections, ensure the inverter(s) are powered off, the generator is powered off, and all circuit breakers are open (off) to prevent damage to the unit.

Step 2. Properly identify the generator's output lines. According to European wiring standards, the Live (L) wire will be black, Neutral (N) will be blue, and Ground (PE) will be green/yellow. Once identified, strip approximately 10mm (\approx 3/8 in.) of insulation from the wires.


Step 3. Ground the generator's output ground to the Ground Bus (labeled PE) of the inverter.

Step 4. Connect the Live (L) wire to the GEN port's L terminal and the Neutral (N) wire to the GEN port's N terminal.



2.7.4 Generator start and stop settings

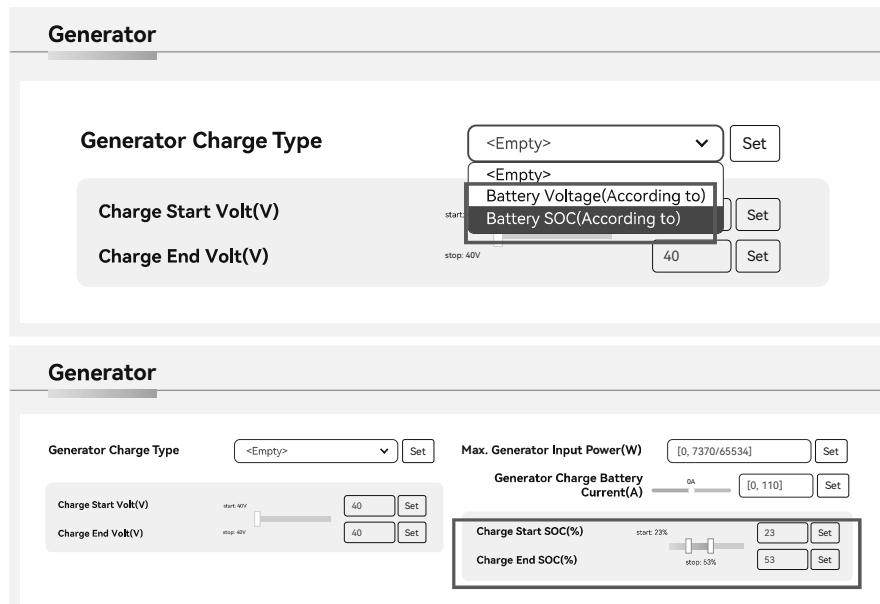Using the Luxpower Monitoring Software, navigate to the “Maintenance” page where “Remote Set” will be automatically selected. Scroll to the “Generator” section and select the “Generator Charge Type” (see screenshot below). Typically, lead-acid batteries are charged based on voltage, while lithium batteries are charged based on SOC (State of Charge).



Generator Start Conditions:

The generator will start when utility fails and one of the following conditions is met:

- The battery is discharged to the cut-off setting
- There is a force charge request from the battery
- The battery voltage or SOC is lower than the “Generator Charge Start Battery Volt / SOC” setting

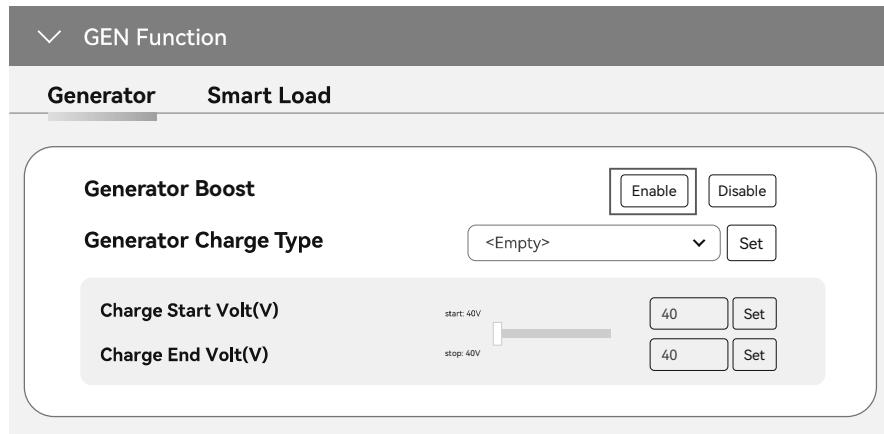
Generator Stop Conditions:

The generator will stop when the battery voltage or SOC is higher than the “Generator Charge End Battery Volt / SOC” settings.

2.7.5 Gen Boost Function


In real applications, customer loads often fluctuate, making generators highly sensitive to frequent changes. Activating GEN Boost can allocate a margin for the generator's input power, preventing it from consistently operating near overload conditions.

Enable GEN boost




2.8 Smart load Connection

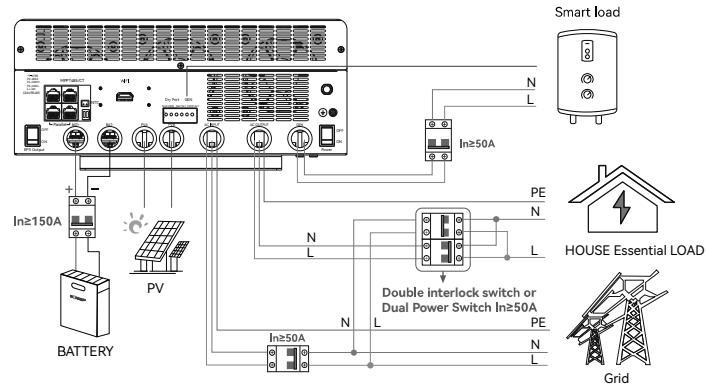The SNA 3-6K's dedicated generator port can also connect to various smart loads, such as water heaters, in addition to generators.



2.8.1 Smart Load Settings

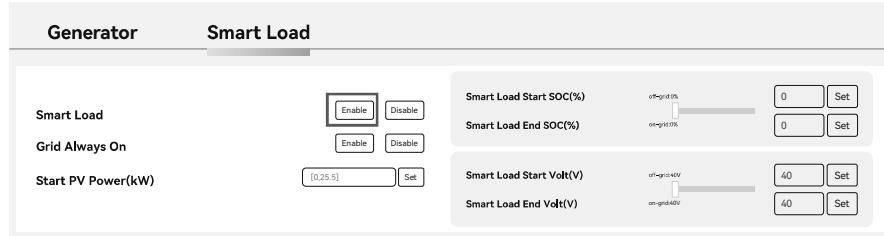Enable smart load



Enable "Grid always on": When connected to the grid, the smart load remains continuously connected.

Start PV Power: Input the PV power threshold at which you want the smart load to start. You can also input the battery's SOC or voltage to select when to start and stop.

If your home already has an existing grid-tied system, you can connect it to our generator interface as an AC power input, transforming your grid-tied system into an energy storage system.

2.9 AC Coupling Settings

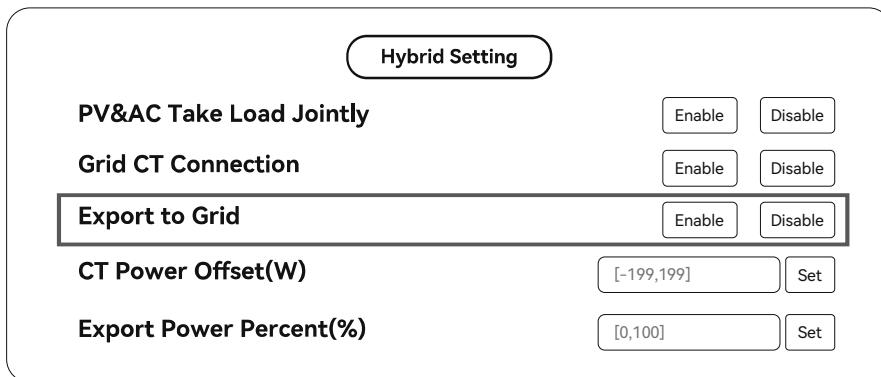
The AC Coupling setting must be enabled when connecting an existing on-grid system to the GEN port.

- Start SOC(%): The SOC at which the AC-coupled inverters are turned on when in off-grid mode (50% to 70% recommended).
- End SOC(%): The SOC at which the AC-coupled inverters are shut down when in off-grid mode (90% recommended).



When on-grid and export to grid are enabled, the AC-coupled inverter will always be on, selling any extra power back to the grid. Ensure you are permitted to sell power to your utility provider when using AC-coupled PV arrays on-grid.


Note: It is recommended to keep the Start Volt/SOC and End Volt/SOC within 5%–10% of each other for optimal operation when utilizing the AC coupling function.




2.10 Parallel Function

SNA series inverter support up to 18 units to composed single phase parallel system or three phase parallel system, for parallel system setup

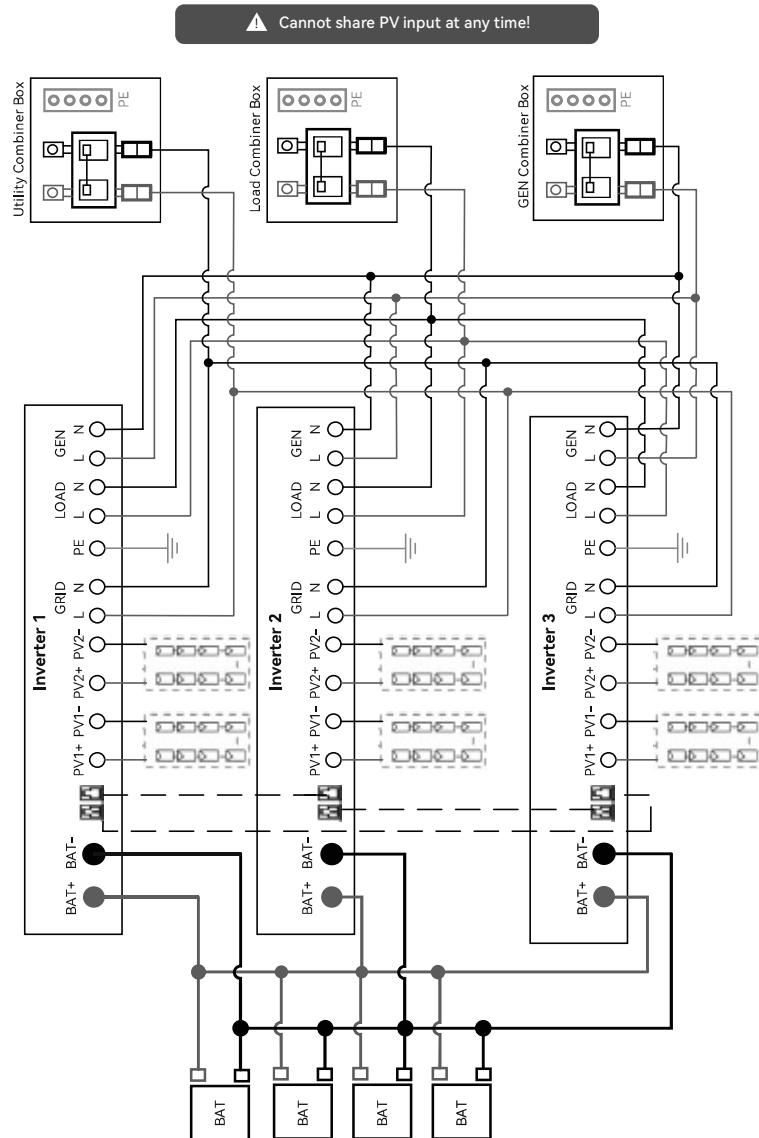
Step 1. Cable connection: the system connection is as below:



⚠ Cannot share PV input at any time!

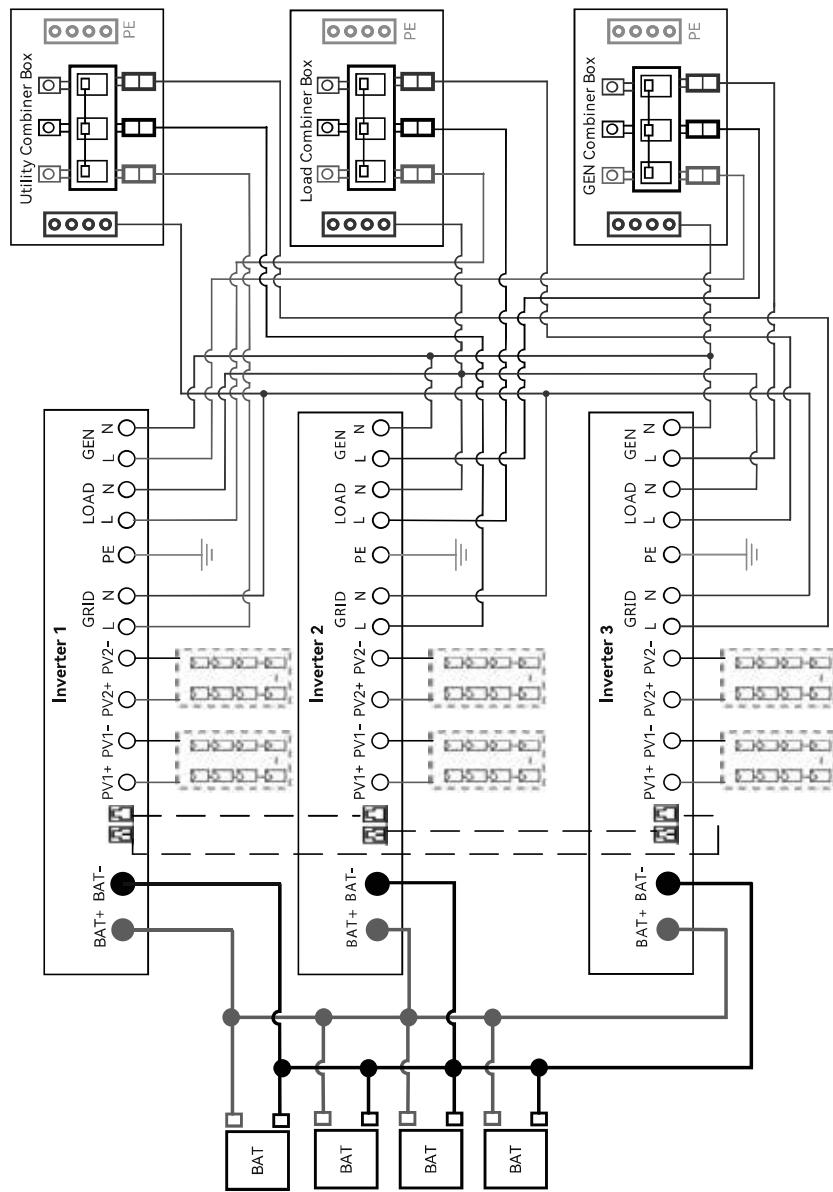

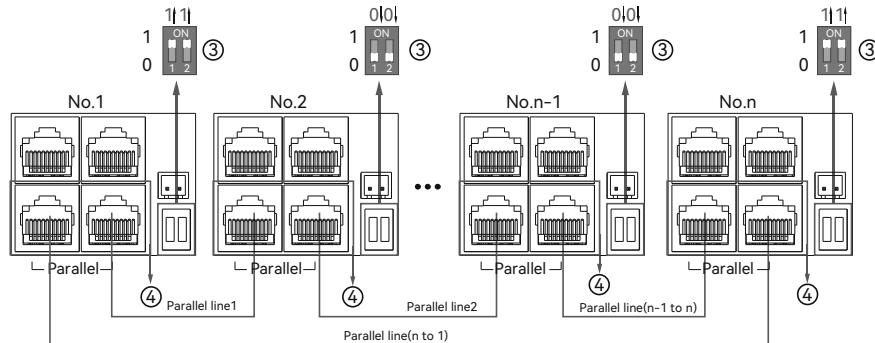Step 2. Cable connection: the system connection is as below:



Step 3. Setup the monitor for the system, add all datalogs in one station. Users can login to the visit interface of monitor system, Configuration->station->Plant Management->add datalog to add the datalogs.

| + Add Station | | | | | | | |
|------------------|---------------|-----------------|------------|--------------|----------|----------------------|-------------|
| | Plant name | Installer | End User | Country | Timezone | Daylight saving time | Create date |
| Dongles | 1 Genesis | Aspergo Install | | South Africa | GMT+2 | No | 2019-03-14 |
| Devices | 2 Butler Home | Elangeni | Johnbutler | South Africa | GMT+2 | No | 2019-03-25 |
| Users | 3 Office | | | South Africa | GMT+2 | No | 2019-06-03 |
| Operation Record | 4 Cronje Home | Broomhead | cronje | South Africa | GMT+2 | No | 2019-07-16 |


Step 4. Enable share battery for the system if the system share one battery bank, otherwise disable the shared battery function.

Step 5. Set the system as a parallel group in the monitor system.

| Station Name | | | | | | | | | | | |
|--|--------|-------------|--------------|-----------------|-------|-------------|-----------------|-------------|-------------|--------------|----------|
| Search by inverter SN <input type="text"/> | | | | | | | | | | | |
| Serial Number | Status | Solar Power | Charge Power | Discharge Power | Load | Solar Yield | Battery Dischar | Feed Energy | Consumption | Station name | Parallel |
| 1 | Normal | 228 W | 42 W | 0 W | 182 W | 215.3 kWh | 39.6 kWh | 0 kWh | 551.2 kWh | Dragonview | Parallel |
| 2 | | 35 W | 32 W | 0 W | 0 W | 158.7 kWh | 21.1 kWh | 0 kWh | 160.5 kWh | Dragonview | A-2 |
| 3 | | 1 kW | 129 W | 0 W | 1 kW | 170.3 kWh | 49.9 kWh | 0 kWh | 434.4 kWh | Dragonview | A-3 |
| 4 | | 79 W | 48 W | 0 W | 106 W | 99 kWh | 85.6 kWh | 0 kWh | 257.1 kWh | Dragonview | A-4 |

For more detailed guidance for paralleling system, please visit <https://www.luxpowertek.com/download/> And download the guidance.

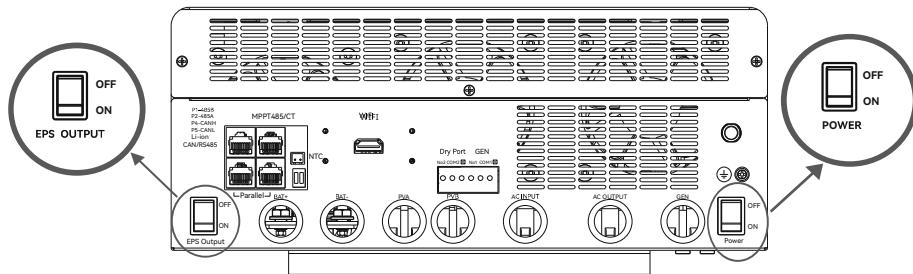2.11 Power and EPS ON/OFF








1. Power Switch: Control power supply for the unit
2. EPS Output Switch: Use to control the AC output

After connection, please turn on both switch. Users can turn off the EPS output switch to turn off power supply in some emergency case.

3. Working modes

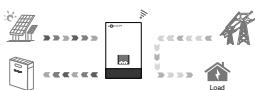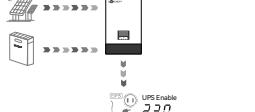3.1 SNA Series inverter modes introduction:

| | | |
|------------------|---|--|
| Bypass Mode |  | AC is used to take the load. |
| PV Charge Bypass |  | PV charge the battery while the AC power the load. |
| BAT Grid off |  | Battery is used to take the load. |
| PV+BAT Grid off |  | PV+Battery power the load together. |
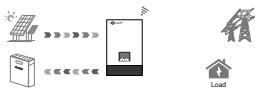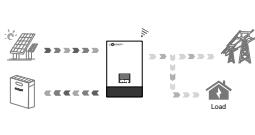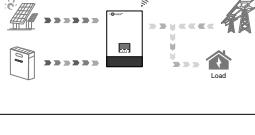
| | | |
|--------------------|---|--|
| PV Charge |  | 1. When the EPS key off, the inverter charge the battery only. 2. When the battery is power off, the PV can wake up the battery automatically. |
| PV Charge+Grid off |  | PV charge the battery and power the load. |
| AC Charge |  | 1. AC charge the battery from AC Input or GEN Input. 2. When the battery is power off, the AC can wake up the battery automatically |
| PV+AC charge |  | PV+AC charge the battery. AC is from AC Input or GEN Input. |
| PV Grid off |  | NOTE: The output power depends on the PV energy input, if the PV energy is unstable, which will influence the output power. When you power off the battery, the PV will supply power to the load. |
| PV charge Grid on |  | PV charge battery and power the load. *The rest power from PV can feed in Grid. |
| PV+BAT Grid on |  | PV+Battery power the load, and the AC can power the load if PV+Battery power not enough. |
| PV Grid on |  | PV power the load, the rest power feed in Grid. |

3.2 Working Modes related setting description

| Situation | Setting 1 | Setting 2 | Setting 3 | Working modes and Description |
|---------------------------------|---|--|-----------|--|
| AC abnormal | NA | NA | NA | off grid inverter mode if $P_{Solar} > P_{Load}$, solar is used to take load and charge battery if $P_{Solar} < P_{Load}$, solar and battery take the load together, system will discharge until battery lower than the Cut Off Voltage / SOC. |
| PV&AC Take Load Jointly Enable | In the AC first time | NA | | Hybrid Mode 1 (charge first) Solar power will used to charge battery first. The solar power will be used to charge the battery first, AC will take load. 1. If solar power is higher than power need to charge the battery, the extra power will used to take load together with grid. 3. If there is still more energy after charge battery and take the load, it will feed energy into grid if export to grid function is enabled. |
| AC normal | Enable AC charge and in the AC charge time | AC charge according to Time | | Hybrid Mode 1 (charge first)+AC charge battery if solar power is not enough to charge battery. Hybrid Mode 1 (charge first)+AC charge battery if solar power is not enough to charge battery and the battery voltage / SOC is lower than AC start charge voltage / SOC, the AC will stop charging when the battery Voltage / SOC is higher than AC end charge battery voltage / SOC. |
| PV&AC Take Load Jointly Disable | Not in the AC first time and disable AC charge or not in the AC charge time | NA | | Hybrid Mode 2 (load first) Solar power will used to take load first, 1. If solar power is lower than load, battery will discharge together to take load until battery lower than EOD voltage / SOC. If solar power is higher than load, the extra power will used to charge battery, if there is still 2 more energy, it will feed into grid if enable export. |
| | In the AC first time | NA | | Bypass Mode AC will take the load and Solar is used to charge battery. |
| | Enable AC charge and in the AC charge time | AC charge according to Time | | Bypass Mode+AC charge battery / Solar is used to charge battery. AC will take load and also charge battery during AC charge time if solar power is not enough. |
| | Not in the AC first time and disable AC charge or not in the AC charge time | AC charge according to SOC / Battery voltage | | Bypass Mode+AC charge battery Solar is used to charge battery. AC will take load and also charge battery when battery SOC / Voltage is lower than start SOC / Voltage, and the AC will stop charging when the battery / Voltage / SOC is higher than AC end charge battery voltage / SOC. |
| | | | | off grid inverter mode if $P_{Solar} > P_{Load}$, solar is used to take load and charge battery if $P_{Solar} < P_{Load}$, solar and battery take the load together, system will discharge until battery lower than EOD Voltage / SOC. |

3.3 Working as a hybrid inverter

3.3.1 SNA series can work as traditional off grid inverter or as a hybrid inverter. When PV&AC Take Load Jointly function is disabled, it works as a traditional off-grid inverter; In this situation, inverter either use (solar+battery) to take load or use AC take load. otherwise, it will work in hybrid mode.

Related setting

Hybrid Setting

| | |
|--|---|
| PV&AC Take Load Jointly <div style="text-align: right; margin-top: 5px;"> <input type="button" value="Enable"/> <input type="button" value="Disable"/> </div> | Grid CT Connection <div style="text-align: right; margin-top: 5px;"> <input type="button" value="Enable"/> <input type="button" value="Disable"/> </div> |
| Export to Grid <div style="text-align: right; margin-top: 5px;"> <input type="button" value="Enable"/> <input type="button" value="Disable"/> </div> | CT Power Offset(W) <div style="text-align: right; margin-top: 5px;"> <input type="text" value="[-199,199]"/> <input type="button" value="Set"/> </div> |
| Export Power Percent(%) <div style="text-align: right; margin-top: 5px;"> <input type="text" value="0,100"/> <input type="button" value="Set"/> </div> | |

3.3.2 AC First: During the setting time, system will use AC to take load, use solar power to charge the battery first. If there is extra solar power, extra solar power will take the load. When out of the setting time, system will use solar and battery to take load first until battery voltage / SOC is lower than On Grid EOD settings, then it will use AC to take the load.

| | | | | | | | | | | | | | |
|---|--|---|--|---|---|---|--|--|--|---|--|--|--|
| Start <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <input type="button" value="T1"/> <input type="text" value="0,23"/> : <input type="text" value="0,23"/> <input type="button" value="Set"/> </div> <div style="text-align: center;"> <input type="text" value="0,23"/> : <input type="text" value="0,23"/> <input type="button" value="Set"/> </div> </div> | End <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <input type="text" value="0,23"/> : <input type="text" value="0,23"/> <input type="button" value="Set"/> </div> <div style="text-align: center;"> <input type="text" value="0,23"/> : <input type="text" value="0,23"/> <input type="button" value="Set"/> </div> </div> | | | | | | | | | | | | |
| Discharging <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%; vertical-align: top;"> Discharge Control <input type="text" value="0.250/0.500"/> <input type="button" value="Set"/> </td> <td style="width: 50%; vertical-align: top;"> <input type="button" value="Volt"/> <input type="button" value="SOC"/> </td> </tr> <tr> <td style="vertical-align: top;"> Battery Warning Voltage(V) <input type="text" value="14.320"/> <input type="button" value="Set"/> </td> <td style="vertical-align: top;"> Battery Warning SOC(%) <input type="text" value="0.90"/> <input type="button" value="Set"/> </td> </tr> <tr> <td colspan="2" style="text-align: center; vertical-align: top;"> <input type="button" value="On-grid CutOff SOC(%)"/> <input type="text" value="90"/> <input type="button" value="Set"/> </td> </tr> <tr> <td colspan="2" style="text-align: center; vertical-align: top;"> <input type="button" value="Off-grid CutOff SOC(%)"/> <input type="text" value="90"/> <input type="button" value="Set"/> </td> </tr> <tr> <td colspan="2" style="text-align: center; vertical-align: top;"> <input type="button" value="On-grid Cut-Off Volt(V)"/> <input type="text" value="90"/> <input type="button" value="Set"/> </td> </tr> <tr> <td colspan="2" style="text-align: center; vertical-align: top;"> <input type="button" value="Off-grid Cut-Off Volt(V)"/> <input type="text" value="90"/> <input type="button" value="Set"/> </td> </tr> </table> | | Discharge Control <input type="text" value="0.250/0.500"/> <input type="button" value="Set"/> | <input type="button" value="Volt"/> <input type="button" value="SOC"/> | Battery Warning Voltage(V) <input type="text" value="14.320"/> <input type="button" value="Set"/> | Battery Warning SOC(%) <input type="text" value="0.90"/> <input type="button" value="Set"/> | <input type="button" value="On-grid CutOff SOC(%)"/> <input type="text" value="90"/> <input type="button" value="Set"/> | | <input type="button" value="Off-grid CutOff SOC(%)"/> <input type="text" value="90"/> <input type="button" value="Set"/> | | <input type="button" value="On-grid Cut-Off Volt(V)"/> <input type="text" value="90"/> <input type="button" value="Set"/> | | <input type="button" value="Off-grid Cut-Off Volt(V)"/> <input type="text" value="90"/> <input type="button" value="Set"/> | |
| Discharge Control <input type="text" value="0.250/0.500"/> <input type="button" value="Set"/> | <input type="button" value="Volt"/> <input type="button" value="SOC"/> | | | | | | | | | | | | |
| Battery Warning Voltage(V) <input type="text" value="14.320"/> <input type="button" value="Set"/> | Battery Warning SOC(%) <input type="text" value="0.90"/> <input type="button" value="Set"/> | | | | | | | | | | | | |
| <input type="button" value="On-grid CutOff SOC(%)"/> <input type="text" value="90"/> <input type="button" value="Set"/> | | | | | | | | | | | | | |
| <input type="button" value="Off-grid CutOff SOC(%)"/> <input type="text" value="90"/> <input type="button" value="Set"/> | | | | | | | | | | | | | |
| <input type="button" value="On-grid Cut-Off Volt(V)"/> <input type="text" value="90"/> <input type="button" value="Set"/> | | | | | | | | | | | | | |
| <input type="button" value="Off-grid Cut-Off Volt(V)"/> <input type="text" value="90"/> <input type="button" value="Set"/> | | | | | | | | | | | | | |


3.3.3 AC Charge function Disable: The system will not use AC to charge the battery (except Li ion BMS set force charge flag).

| | |
|---|--|
| AC Charge Battery Current(A) <div style="text-align: right; margin-top: 5px;"> <input type="text" value="0,250"/> <input type="button" value="Set"/> </div> | AC Charge Based On <div style="text-align: right; margin-top: 5px;"> <input type="button" value="<Empty>"/> <input type="button" value="Set"/> </div> |
| <div style="border: 1px solid black; padding: 5px; background-color: #f0f0f0; margin-top: 10px;"> <input type="button" value="Disable"/> <input type="button" value="Time(According to)"/> <input type="button" value="Battery Voltage(According to)"/> <input type="button" value="Battery SOC(According to)"/> <input type="button" value="Battery Voltage and Time(According to)"/> <input type="button" value="Battery SOC and Time(According to)"/> </div> | |

- According to Time: During the setting time, system will use AC to charge the battery until battery full and battery will not discharge during the setting time.
- According to Battery Voltage: During the setting voltage, system will use AC to charge the battery if battery voltage is lower than AC Charge Start Battery Voltage and will stop when Voltage is higher than AC Charge End Battery Voltage.
- According to Battery SOC: During the setting SOC, system will use AC to charge the battery if battery SOC is lower than AC Charge Start Battery SOC and will stop when Voltage is higher than AC Charge End Battery SOC.
- According to Battery Voltage and Time: During the setting time, system will use AC to charge the battery if battery voltage is lower than AC Charge Start Battery Voltage and will stop when Voltage is higher than AC Charge End Battery Voltage. And battery will not discharge during the setting time.
- According to Battery SOC and Time: During the setting time, system will use AC to charge the battery if battery SOC is lower than AC Charge Start Battery SOC and will stop when Voltage is higher than AC Charge End Battery SOC. And battery will not discharge during the setting time.


4. LCD display and settings

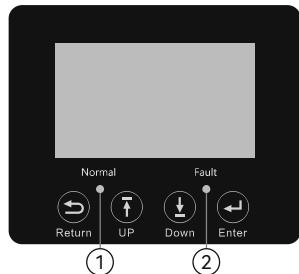4.1 LED Display








| LED Indicator | | Messages | |
|---------------|-------|----------|--|
| 1 | Green | Solid On | Working normal |
| | | Flashing | fast: Warning slow: Firmware update |
| 2 | Red | Flashing | Fault condition occurs in the inverter |

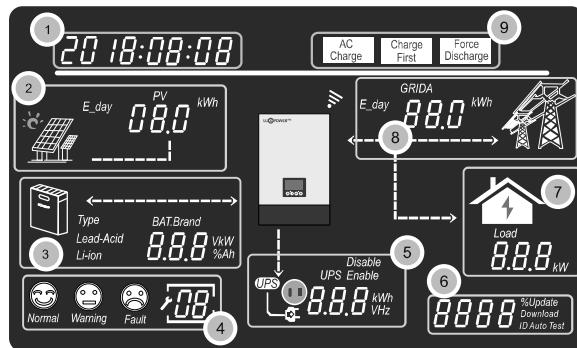4.2 LCD Display




| NO. | Description | Remarks |
|-----|---|--|
| 1 | Generally Information Display Area | Display the currently time / date by default (year / month / day / hour / minute" switching automatically). When press Up or Down buttons, this area will display the firmware version information, serial number etc. Display the setting selection information when entering settings. |
| 2 | On-grid solar inverter output power and energy data | This area shows the data of PV voltage, power and the setting of PV input connection information. |
| 3 | Battery information and data | This area shows the battery type, battery brand (lithium battery), the lead-Acid battery setting of CV voltage, Floating charging voltage, Cut off voltage, Discharge end voltage . And display the voltage, SOC and power in turns of period of 1 seconds. |
| 4 | System working status / setting code | There are three type of working status-normal, warning and fault, in right side of this area, there are code display, it will display different type of code-the system working mode code, warning code, fault code and setting code. |
| 5 | UPS/EPS output information and data | When UPS function is enabled, this area will display UPS voltage, frequency, power etc. in turns of periods of 1s. |
| 6 | Programming & the percentage of AC output power | When firmware updating in process, it will display relevant information When in grid off, this area will display the Percentage of the maximum AC output power. |
| 7 | Loads consumption | Display the power consumption by the loads in on grid model. |
| 8 | Grid information and Generator information | Display the grid (GRIDA) information of voltage, frequency, input or output power, the Generator (GRIDB) information of voltage, frequency, input power ,switch period of 1s. |
| 9 | Working mode settings area | When make settings on the SNA series inverter through the LCD, this area will display the AC Charge, Force Discharge, Charge First option for setting on those working modes. It will not display those information unless in the setting process. |

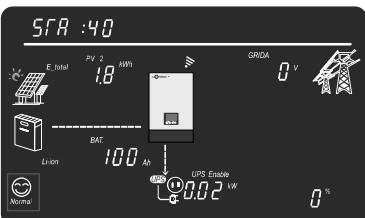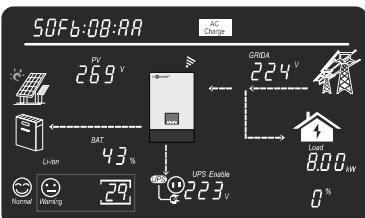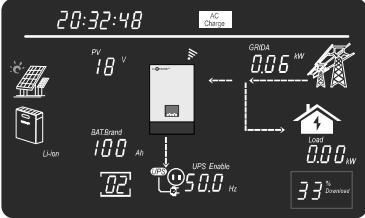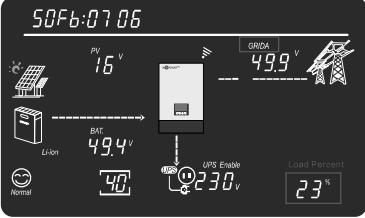
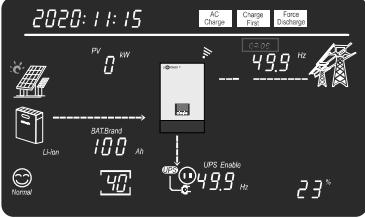
4.3 Inverter Status Display




| | |
|--|--|
| <p>Normal status, running status 40</p>  | <p>Warning Status, warning 29</p>  |
| <p>Fault status, fault 21</p>  | <p>Flash status: download percent is 33%</p>  |
| <p>When display 'GRIDA' , it means the Grid information is about AC utility, The percent display on the right down corner means the load percentage.</p>  | <p>When display 'GRIDB' , it means the AC information is about Gen set input.</p>  |




4.4 LCD Settings

| <p>There are four buttons on the LCD.</p> <div style="display: flex; justify-content: space-around; align-items: center;"> Return UP Down Enter </div> | | |
|---|---------------|--|
| <p>Step for setting by the display:</p> <p>Step 1. After touch Enter button for about 2 seconds, the unit will enter setting mode. The setting icon and index will flashing.</p> <p>Step 2. Touch UP or Down button to select setting index form 1 to 19.</p> <p>Step 3. Then touch Enter button to set this item.</p> <p>Step 4. Touch UP or Down button to change the settings.</p> <p>Step 5. Touch Enter to confirm the setting or Return the setting list is as below.</p> | | |
| Index | Description | Setting Option |
| 1 | Date&time | <p>Setting Year / Month / day 20 18:08:08</p> <p>Setting hour / minute / second 10:09:08</p> |
| 2 | PV input mode | <p>Default: S S: two independent Strings input </p> <p>P: Same string input for 2 MPPTs </p> <p>dc: DC source input </p> |



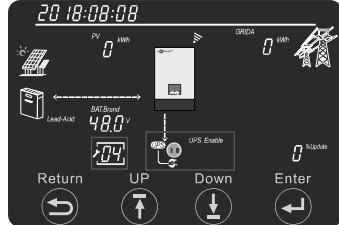
| | | |
|---|----------------------------------|---|
| 3 | Battery | <p>Run with No Battery: Step 1. Choose battery type first, when no flashing, select Enter to choose Run with No battery.</p>  <p>For Lead Acid: Step 1. Choose battery type first, when Lead-Acid flashing, select Enter to choose Lead-acid battery. Step 2. Then choose battery capacity.</p>   <p>For Lithium battery: Step 1. Choose battery type first, when Li-ion flashing, select Enter to choose Li-ion battery Step 2. Choose battery brand. 0-> Standard Battery 2->Pylon Battery 6->Luxpower protocol Battery</p>   |
| 4 | UPS Output voltage and frequency |  <p>AC Output voltage 200Vac / 208Vac / 220Vac / 230Vac (Default) / 240Vac</p>  <p>AC Output frequency 50Hz (Default)/60Hz</p>  |
| 5 | Buzzer enable |  <p>Buzzer enable (Default)</p>  <p>Buzzer Disable</p>  |

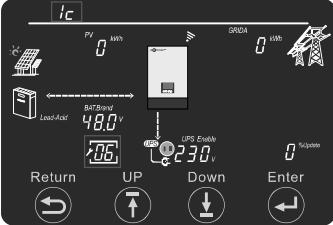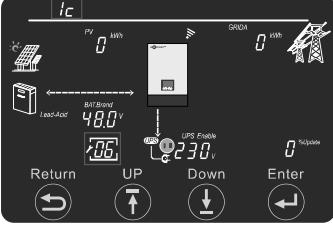
| | | |
|---|---|---|
| 6 | Ic: Maximum charge current | <p>MODEL: SNA5000WPV</p>  <p>Total charge current (Iac+Ipv) setting Setting range: 0A~110A Default: 110A</p> <p>Ic: 110A</p> <p>AC charge current setting: Setting range: 0A~110A Default: 30A</p> <p>Iac: 30A</p> <p>Generator charge current setting: Setting range: 0A~60A Default: 30A</p> <p>Igc: 30A</p> |
| 7 | ConChr: CV voltage setting (Only in Lead-acid battery type) | <p>MODEL: SNA6000WPV</p>  <p>Total charge current (Iac+Ipv) setting Setting range: 0A~140A Default: 140A</p> <p>Ic: 140A</p> <p>AC charge current setting: Setting range: 0A~140A Default: 30A</p> <p>Iac: 30A</p> <p>Generator charge current setting: Setting range: 0A~110A Default: 30A</p> <p>Igc: 30A</p> <p>Setting range: 50.0~59.0Vdc Default: 56.4V</p> <p>BAT: 56.4V</p> |

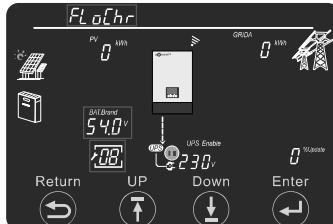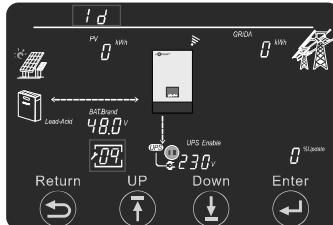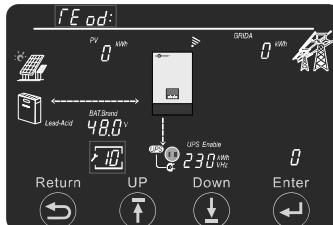
| | | |
|----|---|--|
| 8 | FloChr: Floating charging voltage setting (Only in Lead-acid battery type) |  <p>Setting range: 50.0~56.0Vdc Default: 54.0V</p> <p>54.0V</p> |
| 9 | Id: Maximum discharge current | <p>MODEL: SNA5000WPV</p>  <p>Total discharge current setting Setting range: 0A~110A Default: 110A</p> <p>Id: 110A</p> |
| 9 | Id: Maximum discharge current | <p>MODEL: SNA6000WPV</p>  <p>Total discharge current setting Setting range: 0A~140A Default: 140A</p> <p>Id: 140A</p> |
| 10 | TEOd: Discharge control type: VOLT / SOC |  <p>Setting Range: VOLT / SOC</p> <p>TEOd:VOLT</p> <p>TEOd:SOC</p> |

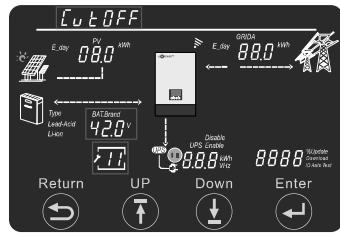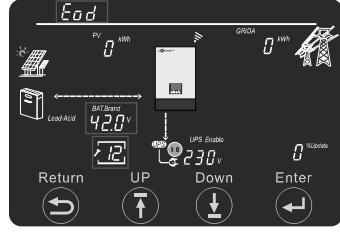
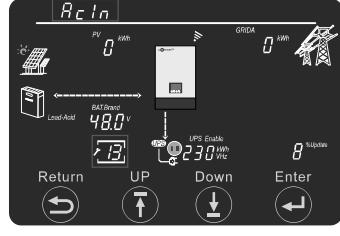
| | | |
|----|---|--|
| 11 | CutOFF: Cut off Voltage or SOC, depend on TEOd |  <p>Setting range: VOLT: 40.0-42V Default: 42V</p>  <p>SOC: 0-15% Default: 15%</p>  |
| 12 | Eod: Discharge end voltage or soc with grid, depend on TEOd |  <p>Setting range: VOLT: 42V-58V Default: 42V</p>  <p>SOC: 15%-90% Default: 15%</p>  |
| 13 | Acln: AC voltage range setting |  <p>Unity AC Input voltage range: 90Vac~280Vac</p>  <p>Unity AC Input voltage range: 170Vac~280Vac</p>  |


| | | |
|----|---|---|
| | AC charge setting (The setting process must enable the AC charging function, confirm the full battery SOC value, and set the confirmation time period 1, 2, 3 to truly complete the AC charging function setting) |  <p>AC Charge function: Setting range: 1. DIS: AC charge disable; 2. TIM: According to time; 3. VOL: According to battery voltage; 4. SOC: According to battery soc; (Touch "Enter" button to set ac charge parameter)</p> <p>AcCh: d 15</p> |
| 14 | <p>AC charge control: Setting range: Vol: 1. Start Voltage: 35.4~52V; 2. End Voltage: 48~59V; SOC: 1. Start Soc: 1~90%; 2. End Soc: 20~100%;</p> <p>AcCh: uOL</p> <p>T 2.0 V</p> <p>BAT 15 %</p> | <p>Setting AC Charge time of 1 start: Range: 00:00~23:59 Default: 00:00~00:00</p> <p>P1:00:00</p> <p>Setting AC Charge time of 1 end: Range: 00:00~23:59 Default: 00:00~00:00</p> <p>P1:23:59</p> <p>Similar to set time2 and times</p> <p>P2:00:00</p> <p>P3:00:00</p> |
| 15 | Utility source (AC Input) to take Load time setting |  <p>Setting time of 1 start: Range: 00:00~23:59 Default: 00:00~00:00</p> <p>P1:00:00</p> <p>Setting time of 1 end: Range: 00:00~23:59 Default: 00:00~00:00</p> <p>P1:23:59</p> <p>Similar to set time2 and time3</p> <p>P2:00:00</p> <p>P3:00:00</p> |
| 16 | Hybrid enable / disable |  <p>Setting Range: Hybrid Disable (default)</p> <p>Disable</p> <p>Hybrid Enable</p> <p>Enable</p> |

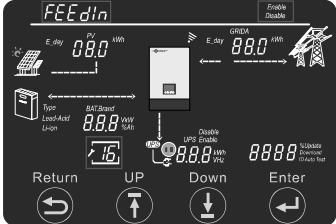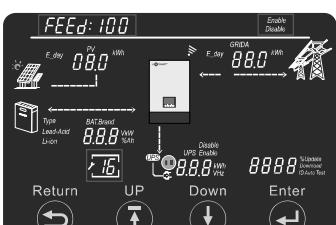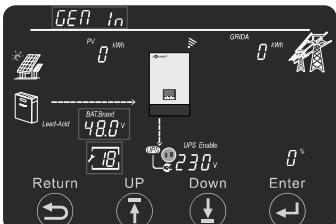
| | | |
|----|---|--|
| | <p>Feed-In Enable / disable Only valid when Hybrid is enabled</p> |  <p>Setting Range: Feed-In Disable (default)</p> <p>Disable</p> <p>Feed-In Enable</p> <p>Enable</p> |
| 16 | <p>Maximum Feed-In percent Only valid when Feed-In is enabled Power percent can be set larger than 100% in case of there is other generating device in the system</p> |  <p>Setting Range: 0-100% 0% (default)</p> <p>FEEd: 100</p> |
| 17 | <p>Battery Wakeup Enable / disable (Not for No Battery type)</p> | <p>Enable wakeup battery</p>  |
| 18 | <p>Max Generator Input Power</p> |  <p>Setting Range:0-7369W 7369W (default)</p> <p>GEN: 7369</p> |



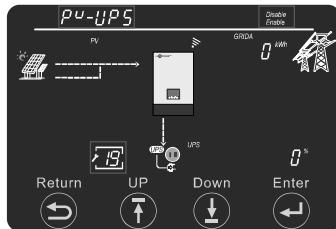
| | | |
|----|--------------------------------------|--|
| 19 | PV Off Grid enable / disable |  <p>Setting Range: PV Off Grid Enable (default)</p> <p>Enable</p> <p>PV Off Grid Disable</p> <p>Disable</p> |
| 20 | Power Save Function enable / disable |  <p>Setting Range: ECO Mode Disable (default)</p> <p>ECO Mode Enable</p> <p>Disable</p> <p>Enable</p> <p>Enable</p> <p>Setting Range: Green Function Disable (default)</p> <p>Disable</p> <p>Green Function Enable: When enabled, if the inverter load reading is less than 60W for more than 0minutes, the inverter output will be cut off.</p> |
| 21 | Parallel setting |  <p>Parallel type setting</p> <p>Setting Range: NoPL (not Parallel) / 1PH (Single phase) / 3PH (Three phase) NoPL (default)</p> <p>P2t3:1PH</p> <p>Parallel phase setting</p> <p>Setting Range: P1 (Rphase) / P2 (Sphase) / P3 (Tphase) P1 (default)</p> <p>P2t3:P1</p> <p>Bat Share enable / disable</p> <p>Setting Range: Disable (default) Enable</p> <p>Bat Share</p> <p>Disable</p> <p>Enable</p> |
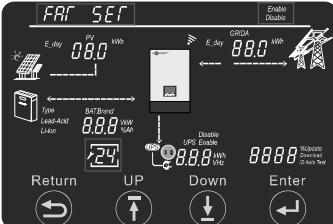
| | | |
|----|----------------------|---|
| 22 | Error / Alarm Record |  <p>Error Record ->Record Index ->>Record Msg: (Year: Month: Day; Hour: Min:Sec; Error code)</p> <p>Err REC</p> |
| 23 | CT Offset |  <p>External Grid CT (Latest Version Only) Setting Range: Disable (default) / Enable</p> <p>CT-EH [Disable Enable]</p> <p>Internal CT Offset Setting Range: -200~200W 20W (default)</p> <p>CT -169 Power</p> |
| 24 | Fan speed setting |  <p>Fan1 Speed Percent Setting Range: 20~100% 70% (default)</p> <p>FAN : 055</p> <p>Fan1 Speed New Slope Setting Range: Disable (default) Enable</p> <p>FAN SL OP [Disable Enable]</p> <p>Fan2 Speed Percent Setting Range: 20~100% 70% (default)</p> <p>FAN : 055</p> <p>Fan1 Speed New Slope Setting Range: Disable (default) Enable</p> <p>FAN SL OP [Disable Enable]</p> |
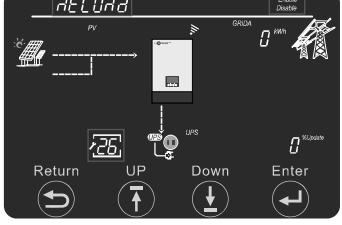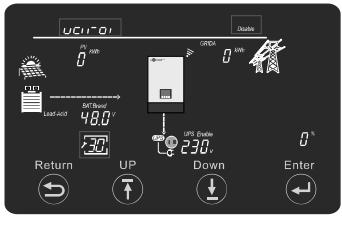
| | | |
|----|---------------------------------|--|
| 25 | Generator charge setting |  <p>Generator charge setting ->charge control type Setting Range: 1. VOL (default) 2. SOC</p> <p>->control type ->control value Setting Range: VOL : 1. Start Voltage: 38.4-52V; 2. End Voltage: 48-59V; SOC: 1. Start Soc: 1-90%; 2. End Soc: 20-100%;</p> <p>GENC VOL Start</p> <p>42.0 V 15 %</p> |
| 26 | Neutral-Ground Bonding Function |  <p>This setting allows the user to enable or disable the internal neutral-ground bond. The inverter must be in standby to make this change. Turn the "EPS Output" switch to off to engage standby mode. Range: Enable / Disable Default: Enable</p> <p>Enable</p> <p>Disable</p> |
| 30 | GEN BOOST Enable/Disable |  <p>GEN BOOST ->Enable/Disable Setting Range: 1. Disable (default) 2. Enable</p> <p>Enable</p> <p>Disable</p> |
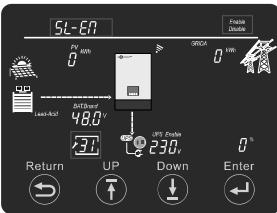
| | | |
|----|------------------------------|---|
| 31 | Smart Load Enable/Disable |  |
| | | <p>Smart Load ->Enable/Disable Setting Range: 1. Disable (default) 2. Enable</p> <p style="text-align: center;">Enable Disable</p> |
| | | <p>->>Smart Load GridOn Setting Range: 1. Disable (default) 2. Enable</p> <p style="text-align: center;"></p> |
| | | <p>->>>Smart Load PV Power Setting Range: 0~25.5kW; (0.5kW default)</p>  |
| | | <p>->>>>Smart Load On Volt/Soc Setting Range: VOL: 40~59V; (54V default) SOC: 0~100%; (90% default)</p>   |
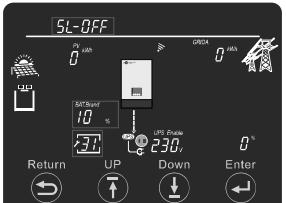
| | | |
|----|-----------------------------|--|
| | | <p>->>>>Smart Load Off Volt/Soc Setting Range: VOL: 40~59V; (48V default) SOC: 0~100%; (60% default)</p>   |
| 32 | AC Couple Enable/Disable |  <p>Enable Disable</p> <p>AC Couple ->Enable/Disable Setting Range: 1. Disable (default) 2. Enable</p> |
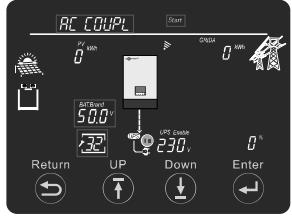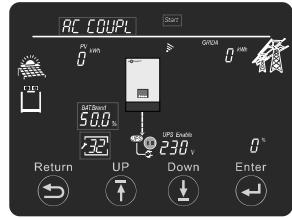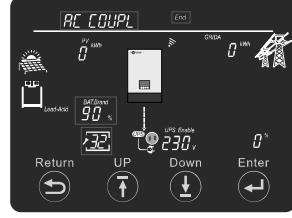
| | |
|--|--|
| |  <p>->>AC couple Start Volt/Soc Setting Range: VOL: 40~59V; (50V default) SOC: 0~101%; (50% default)</p>  |
| |  <p>->>> AC couple End Volt/Soc Setting Range: VOL: 40~59V; (54V default) SOC: 0~101%; (90% default)</p>  |

5. Monitor System for SNA Series inverter

- Users can use wifi dongle / WLAN dongle / 4G dongle (Available from 2021 March for some countries) to monitor the energy storage system, The monitor website is: server.luxpowertek.com
- The APP is also available in the google play and apple APP store (Scan two code bar to download the APP).
- Please download the introduction of guidance by website: <https://www.luxpowertek.com/download/>.

1. Wifi Quick Guidance

Quick guidance for setting password for wifi module, the paper is also available in the wifi box.

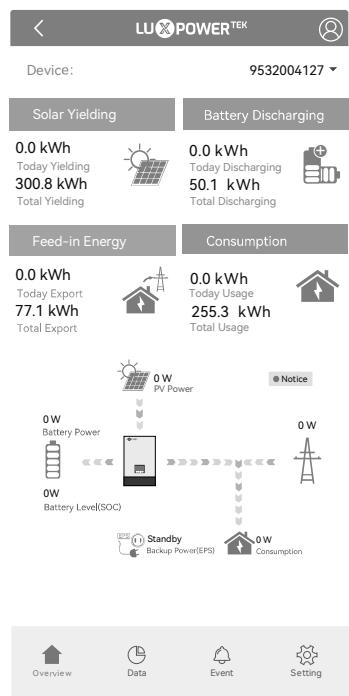
2. Monitor system setup for Distributors and Monitor system setup for endusers, Monitor system registration, wifi password setting, and wifi local monitor and setting.

3. Lux_Monitor_UI_Introduction

Introduction of monitor interface


4. Website Setting Guidance

Introduction of website settings for offgrid inverter



6. Specifications

| Table 1 MPPT Mode Specifications | | |
|--|--------------------------------------|----------------------|
| INVERTER MODEL | SNA5000WPV | SNA6000WPV |
| Max. PV Array Power(W) | 8000(4000/4000) | 9600(4800/4800) |
| Rated PV Input Voltage(V) | 320 | |
| Number of Independent MPPT Inputs | 2 | |
| PV Input Voltage Range(V) | 100~500 | |
| MPPT Voltage Range(V) | 120~385 | |
| Start-up Voltage(V) | 100 | |
| Max. PV Input Current per MPPT (A) | 17/17 | |
| Max. PV Short-circuit Current per MPPT(A) | 25/25 | |
| Max. PV Charging Current(A) | 110 | 140 |
| Table 2 Battery Mode Specifications | | |
| INVERTER MODEL | SNA5000WPV | SNA6000WPV |
| Output Voltage Waveform | Pure Sine Wave | |
| Output Voltage Regulation | 208Vac / 220Vac / 230Vac / 240Vac±5% | |
| Output Frequency | 50Hz / 60Hz | |
| Rated Output Power(W) | 5000 | 6000 |
| Rated Output Current(A) | 22 | 26.5 |
| Max. Charging / Discharging Current(A) | 110/110 | 140/140 |
| Max. Charging / Discharging Power(W) | 5000 | 6000 |
| Peak Efficiency | 93% | |
| Overload Protection | 5s@≥150% load; 10s@110%~150% load | |
| Surge Capacity | 2* rated power within 5 seconds | |
| Recommend Capacity of Battery per Inverter | >200AH | |
| Battery Voltage Range | 46.4V~60V(Li) | 38.4V~60V(Lead_Acid) |
| High DC Cut-off Voltage | 59VDC(Li) | 60VDC(Lead_Acid) |
| High DC Recovery Voltage | 57.4VDC(Li) | 58VDC(Lead_Acid) |
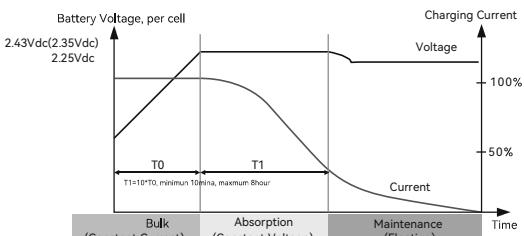
| | | |
|--|------------------------------|--|
| Low DC Warning Voltage(Lead Acid) | load < 20% | 44.0Vdc(Settable) |
| | 20% ≤ load < 50% | Warning Voltage@load < 20% -1.2V |
| | load ≥ 50% | Warning Voltage@load < 20% -3.6V |
| Low DC Warning Return Voltage(Lead Acid) | | Low DC Warning Voltage@Different load+2V |
| Low DC Cut-off Voltage(Lead Acid) | load < 20% | 42.0Vdc(Settable) |
| | 20% ≤ load < 50% | Cut-off Voltage@load < 20% -1.2V |
| | load ≥ 50% | Cut-off Voltage@load < 20% -3.6V |
| Low DC Cut-off Return Voltage(Lead Acid) | Cut-off Voltage@load<20%≥45V | Low DC Cut-off Voltage@load<20%+3V |
| | Cut-off Voltage@load<20%<45V | 48V |
| Low DC Warning SOC | | 20% SOC(Settable) |
| Low DC Warning Return SOC | | Low DC Warning SOC +10% |
| Low DC Cut-off SOC | | 15% SOC (Grid on) (settable) |
| | | 15% SOC (Grid off) (settable) |
| Low DC Cut-off Return SOC | | Low DC Cut-off SOC +10% |
| Charge Cut-off Voltage | | 58.4Vdc |
| No Load Power Consumption | | <60W |
| Lead_Acid Battery Charging Algorithm | | 3-Step |
| Bulk Charging Voltage | Flooded Battery 58.4Vdc | |
| | AGM / Gel Battery 56.4Vdc | |
| Floating Charging Voltage | | 54Vdc |
|  <p>Charging Curve</p> | | |

| Table 3 Line Mode Specifications | | |
|---|---|--|
| INVERTER MODEL | SNA5000WPV | SNA6000WPV |
| Input Voltage Waveform | Sinusoidal(utility or generator) | |
| Nominal Input Voltage(V) | 230Vac | |
| Low Loss Voltage | 170Vac±7V(UPS); 90Vac±7V(Appliances) | |
| Low Loss Return Voltage | 180Vac±7V(UPS); 100Vac±7V(Appliances) | |
| High Loss Voltage | 280Vac±7V | |
| High Loss Return Voltage | 270Vac±7V | |
| Max. AC Input Voltage | 280Vac | |
| Nominal Input Frequency | 50Hz/60Hz(Auto detection) | |
| Max. AC Input Current(A) | 35 | 39.5 |
| Max. AC Input Power(W) | 8000 | 9000 |
| Max. AC Charging Current(A) | 110 | 140 |
| Rated AC Output Current(A) | 22 | 26.5 |
| Rated AC Output Power(W) | 5000 | 6000 |
| Rated AC Current of Bypass Relays(A) | 40 | 60 |
| Output Short Circuit Protection | Software Protect when GridOff Discharge Circuit Breaker Protect when GridOn Bypass | |
| Transfer Time | <15ms@Single ; <30ms@Parallel | |
| Output power derating: When AC input voltage drops to 200V, the output power will be derated. | Max inv current: 25A Max inv power: 5kW | Max inv current: 30A Max inv power: 6kW |

| Table 4 Generator Mode Specifications | | |
|---|---|------------|
| INVERTER MODEL | SNA5000WPV | SNA6000WPV |
| Rated GEN Voltage(V) | 230 | |
| Rated GEN Frequency(Hz) | 50/60 | |
| Rated GEN Input Current(A) | 32 | |
| Rated GEN Input Power(W) | 7370 | |
| Rated GEN Current of Bypass Relays(A) | 40 | 60 |
| Table 5 Protection/General Specifications | | |
| INVERTER MODEL | SNA5000WPV | SNA6000WPV |
| Over Current / Voltage Protection | YES | |
| Grid Monitoring | YES | |
| AC Surge Protection Type III | YES | |
| Safety Certification | NRS 097, CE | |
| Ingress Protection Rating | IP 20 | |
| Display&Communication Interface | LCD+LED, RS485 / WIFI / CAN | |
| Warranty | 2 Years | |
| Cooling Method | FAN | |
| Topology | Transformer-less | |
| Noise Emission(typical) | <50dB | |
| Operating Temperature Range | 0°C to 45°C(full load) | |
| Storage temperature | -15°C ~ 60°C | |
| Humidity | 5% to 95% Relative Humidity(Non-condensing) | |
| Altitude | <2000m | |
| Dimension(D*W*H)mm | 505*330*135mm | |
| Net Weight | 14.5kg | |

7. Trouble Shooting & Error List

The failures mainly divided into 5 categories, for each category, the behavior is different:

| Code | Description | Trouble shooting |
|------|---|---|
| E000 | Internal communication fault1 | Restart inverter, if the error still exist, contact us (DSP&M3) |
| E002 | Bat On Mos Fail | Restart inverter, if the error still exist, contact us |
| E003 | CT Fail | Restart inverter, if the error still exist, contact us |
| E008 | CAN communication error in Parallel System | Check CAN cable connection is connected to the right COM port |
| E009 | No master in parallel system | Check parallel setting for master/Slave part, there should be one master in the system |
| E012 | UPS output short circuit | Check if the load is short circuit, try to turn off the load and restart inverter |
| E013 | UPS reserve current | Restart inverter, if the error still exist, contact us |
| E015 | Phase Error in three phase parallel system | Check if the AC connection is right for three phase system, there should be one at least one inverter in each phase |
| E016 | Relay fault | Restart inverter, if the error still exist, contact us |
| E017 | Internal communication fault2 | Restart inverter, if the error still exist, contact us (DSP&M8) |
| E018 | Internal communication fault3 | Restart inverter, if the error still exist, contact us (DSP&M3) |
| E019 | Bus voltage high | Check if PV input voltage is higher than 480V |
| E020 | EPS connection fault | Check if EPS and AC connection is in wrong terminal |
| E021 | PV voltage high | Check PV input connection and if PV input voltage is higher than 480V |
| E022 | Over current internal | Restart inverter, if the error still exist, contact us |
| E024 | PV short | Check PV connection |
| E025 | Temperature over range | The internal temperature of inverter is too high, turn off the inverter for 10minutes, restart the inverter, if the error still exist, contact us |
| E026 | Internal Fault | Restart inverter, if the error still exist, contact us (Bus sample) |
| E028 | Sync signal lost in parallel system | Check CAN cable connection is connected to the right COM port |
| E029 | Sync trigger signal lost in parallel system | |
| E031 | Internal communication fault4 | Restart inverter, if the error still exist, contact us (DSP&M8) |

| Code | Description | Trouble shooting |
|------|-------------------------------------|--|
| W000 | Communication failure with battery | Check if you have choose the right battery brand and communication cable is right, if the warning still exist, contact us |
| W003 | Communication failure with meter | Check communication cable, if the warning still exist, contact us |
| W004 | Battery failure | Inverter get battery fault info from battery BMS, restart battery, if the warning still exist, contact us or battery manufacture |
| W008 | Software mismatch | Please contact Luxpower for firmware update |
| W009 | Fan Stuck | Check if the fan is OK |
| W012 | Bat On Mos | Restart inverter, if the error still exist, contact us |
| W013 | Over temperature | The temperature is a little bit high inside inverter |
| W015 | Bat Reverse | Check the battery connection with inverter is right, if the warning still exist, contact us |
| W018 | AC Frequency out of range | Check AC frequency is in range |
| W019 | AC inconsistent in parallel system2 | Reconnect the AC input or Restart inverter, if the error still exist, contact us |
| W025 | Battery voltage high | Check if battery voltage is in normal range |
| W026 | Battery voltage low | Check if battery voltage is in normal range, need to charge the battery if battery voltage is low |
| W027 | Battery open | Check if there is output from the battery and battery connection with inverter is OK |
| W028 | EPS Over load | Check if EPS load is too high |
| W029 | EPS voltage high | Restart inverter, if the error still exist, contact us |
| W031 | EPS DCV high | Restart inverter, if the error still exist, contact us |

Note

Note

Note

■ YOUR RELIABLE ENERGY SOLUTIONS PARTNER



Lux Power Technology Co., Ltd
Headquarter: +86 755 8520 9056
www.luxpowertek.com
Contact us: info@luxpowertek.com



092.20024AB