附:制作要求 100G双胶纸单面黑白打印, 展开尺寸: 210*297mm, 折叠尺寸105*74.25mm 横向压一道竖向压三道,折叠正面朝上。

1. Tools Required

The following tools will be required to install the Mira-BMS and the battery.












Multimeter




Safety Gloves Safety Goggles Ribbon

2. Packing List

For Mira-HV25 :

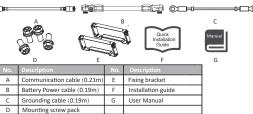


Note: item E is provide separately, not including in battery package. Please contact your dealer if you do not have it.

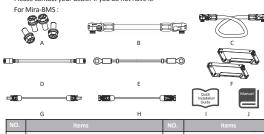


NO.	Items	NO.	Items
Α	Mounting screw pack	F	Fixing bracket
В	Main negative battery connection cable (0.17m)	G	DC positive output cable (1.2m)
С	Main positive battery connection cable (1.3m)	Н	DC negative output cable (1.2m)
D	Communication cable (BMS-inverter) (1.2m)	- 1	Installation guide
Е	Grounding cable (1m)	J	User manual

Note: item F is provide separately, not including in battery package. Please contact your dealer if you do not have it.

3. Terminals

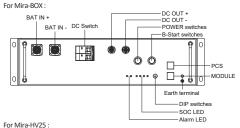

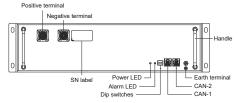

4. Installation Steps

Note: Batteries with different color SN label cannot be mixed in one system.

Step 1


Place the front bracket and back bracket as shown below.







Locate the brackets for the second battery on top of the first pair of the bracket and fasten the connecting button on the side.

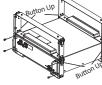

Step 4


Insert the battery module into the bracket from front horizontally, and tighten the four screws on the side.




Note:

Max. 4 pieces battery per stack. Please make sure each system including 1 Mira-BMS.

Battery modules less than 4 pieces:

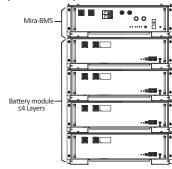


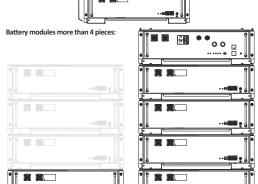


5. Wiring Steps

Battery power cable:

Step 1: Connect the power cable starting from the first battery module in series with other battery modules (Orange opposite, black negative). A 'click' sound indicates the connections are secured. The positive and negative connection of the battery cable is shown in below.

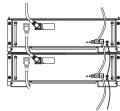


Step 2 : Measure voltage value: After all battery modules are connected in series, use a multimeter to measure the DC voltage on DC terminal. The total voltage should be N *52±10V (N is the total number of battery module). Please refer to the picture below for voltage test.

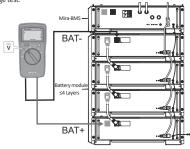

Communication cable connection:


Step 1: Take the main positive cable (two orange plugs), the main negative line (two black plugs) to connect the Mira-BMS.

Step 2: Then connect the MODULE on the Mira-BMS to the CAN-1 of the first battery module, connect the CAN-2 of the previous battery module to CAN-1 of the next battery module, leave the last module's CAN-2 vacant. Wiring shall be connected in the sequence as shown in below.

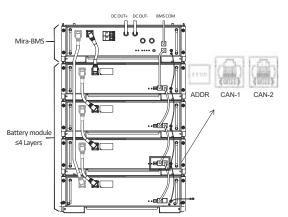

Grounding cable:

Connect the grounding cable to ensure that all batteries are grounded. Wiring shall be connected in the sequence as shown in below.

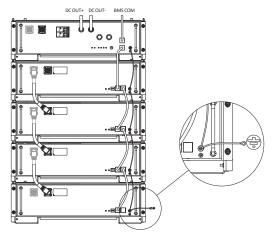

6. System Start Up

Mira-BMS operation:

- 1. Normal mode: Turn on DC switch first, then press 'POWER' button.
- 2. Black start: (No grid connected) press the 'B-start' switch, turn on DC switch, and then press the 'POWER' switch.

Startup steps:

After powering on, all the green lights flash once, and then the running water lights flash once. The light on the Mira-HV25 comes on after a delay, not at the same time as the light on the BMS.

